 
 
 
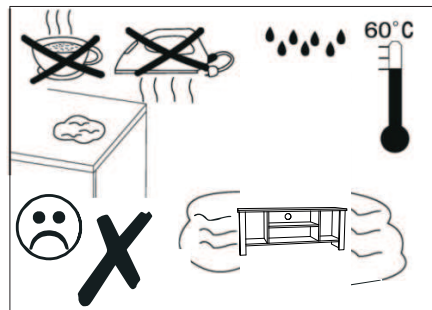 
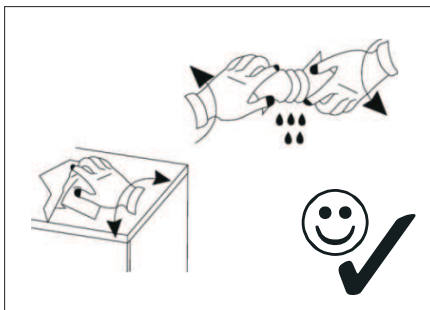 
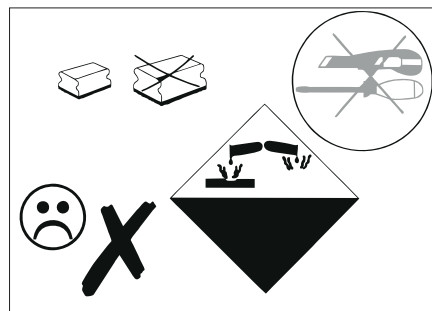 
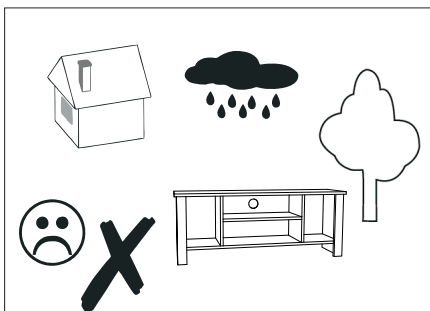 


197-000176

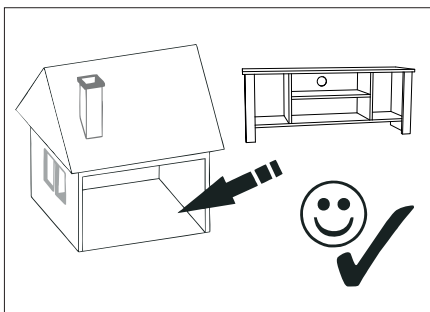

Instruction Manual

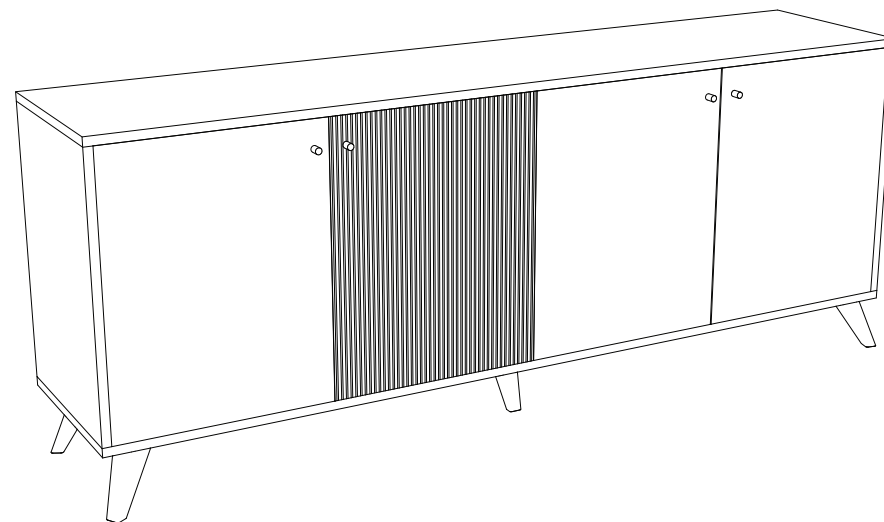

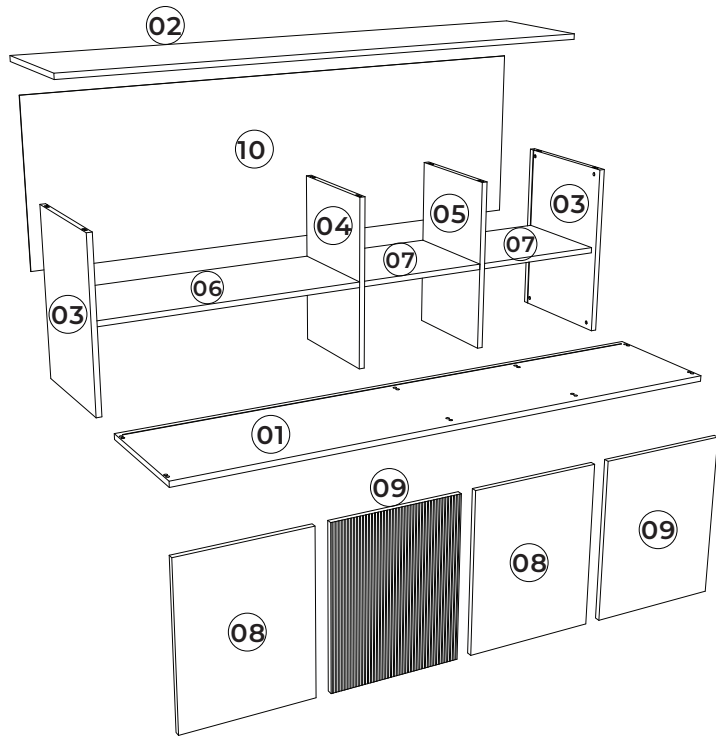

| | | | |
|-----------------------------------|-----------------------------------|-----------------------------------|-----------------------|
| A01 16x *14 mm | A02 16x *5x45 mm | A03 16x *8x30 mm | A04 16x |
| A10 57x *4x20 mm | A13 8x | A14 4x | A15 4x |
| A16 8x | A17 12x | A18 4x | |



 
 
Important information
Read carefully.
Keep this information for further reference.

GB WARNING



Serious or fatal crushing injuries can occur from furniture tip-over. To prevent this furniture from tipping over it must be permanently fixed to the wall.

Fixing devices for the wall are not included since different wall materials require different types of fixing devices. Use fixing devices suitable for the walls in your home. For advice on suitable fixing systems, contact your local specialized dealer.



8.

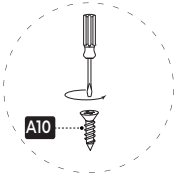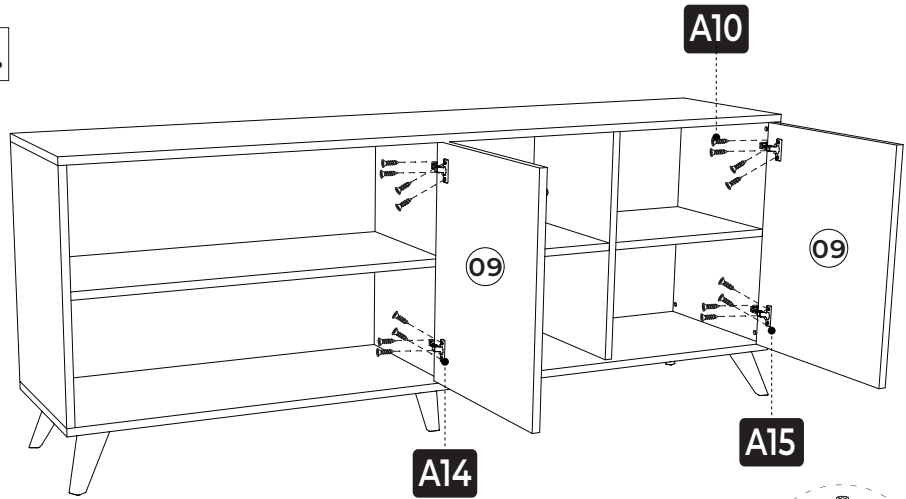

 
 
9.

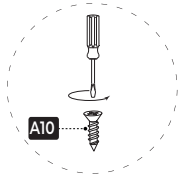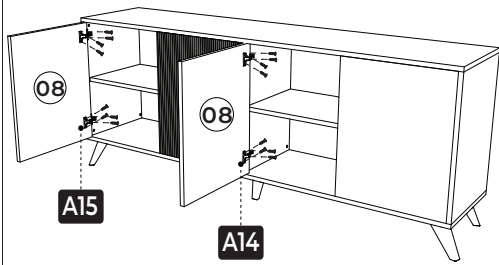


 
 
10.

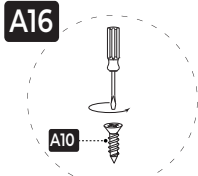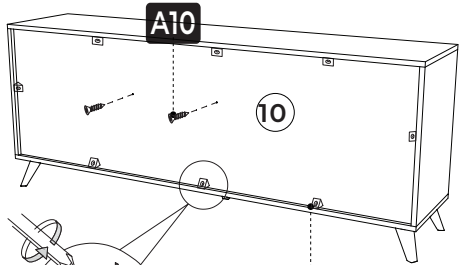

  
1.

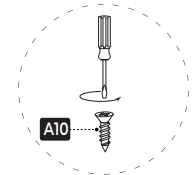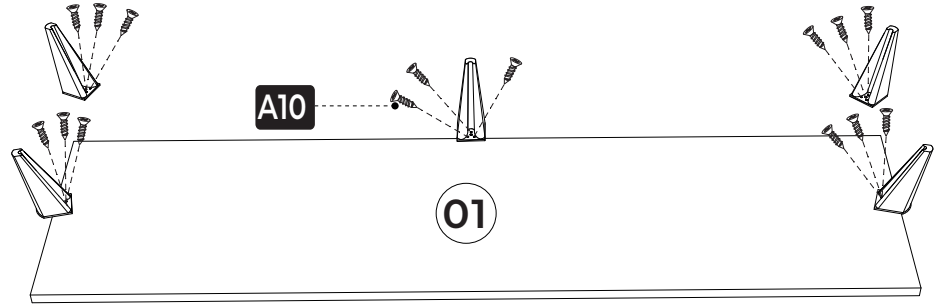

   
2.

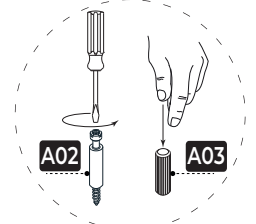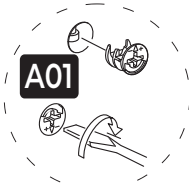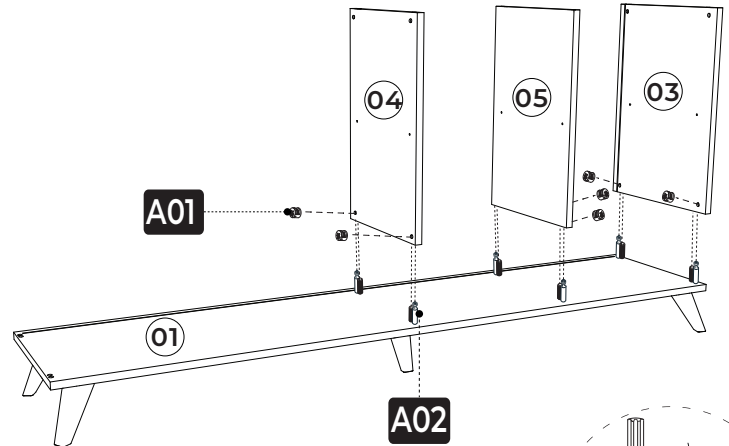


 
3.

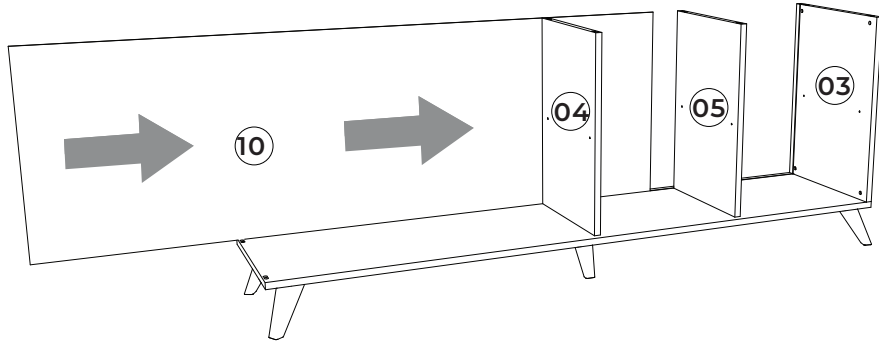

 
4.

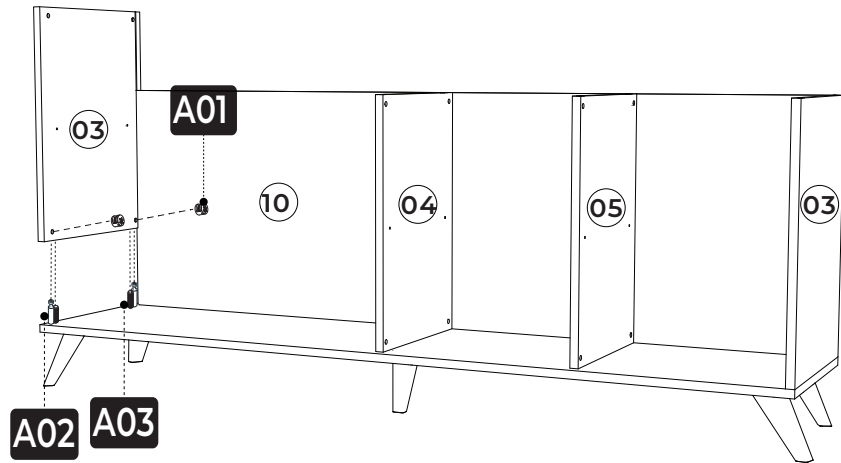



A01

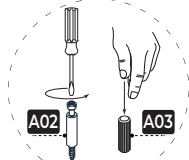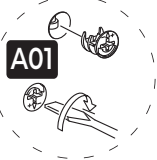  

 
5.

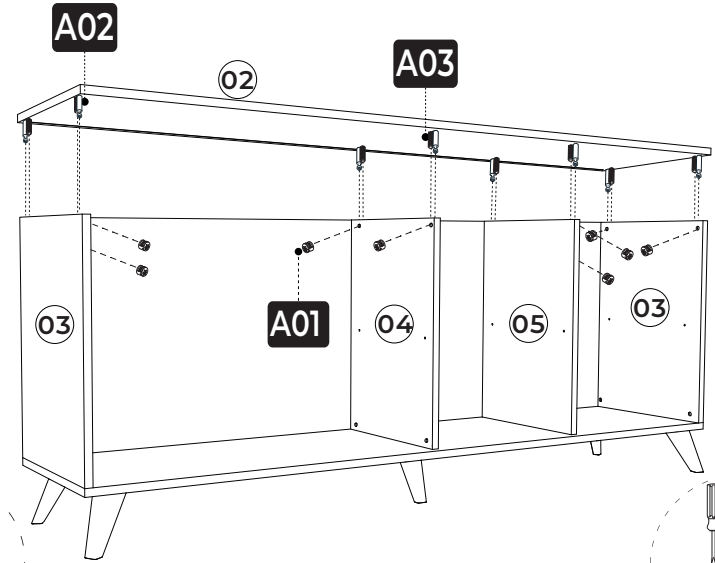

A01

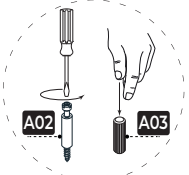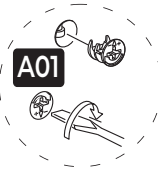  

 6.

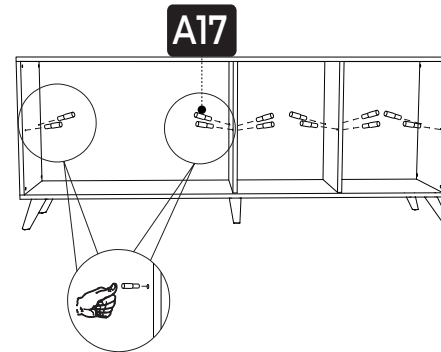

7.

