 
 
 
 
 
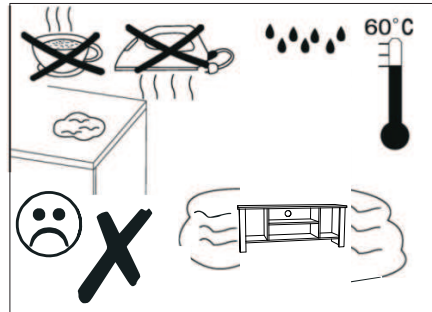 
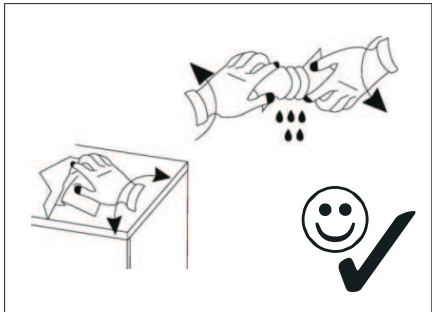 
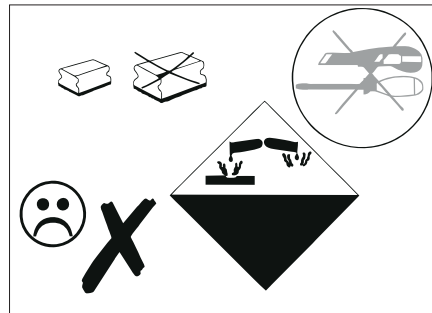 


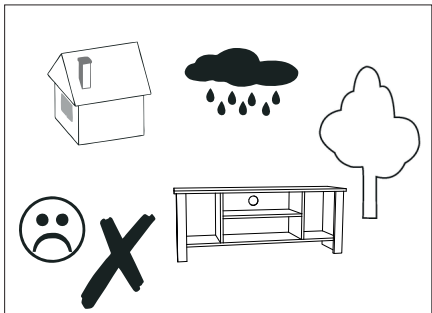

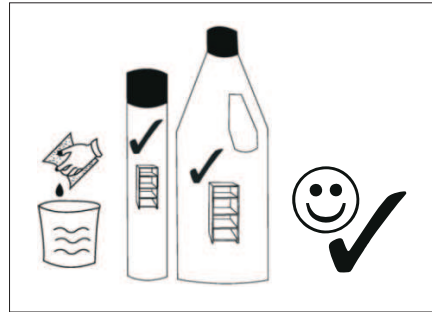

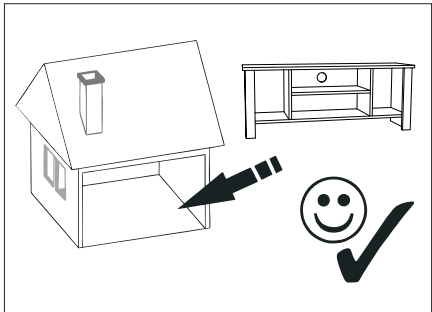

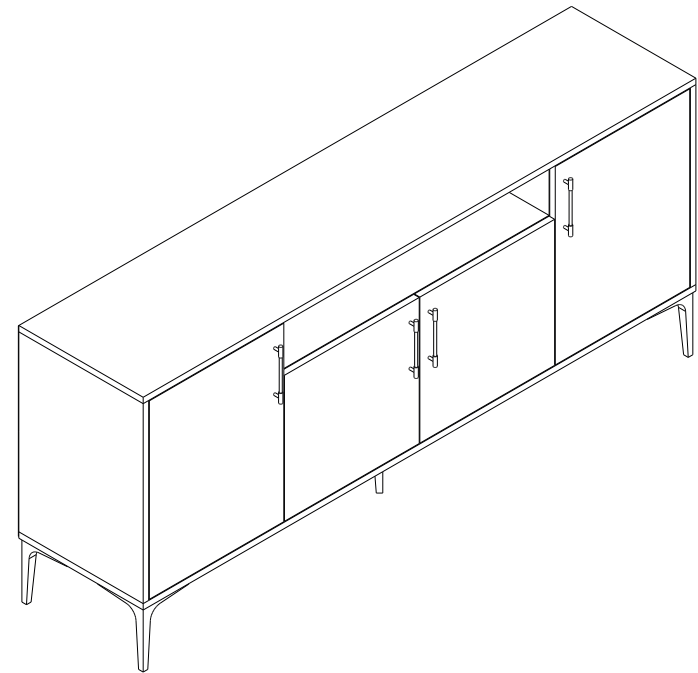

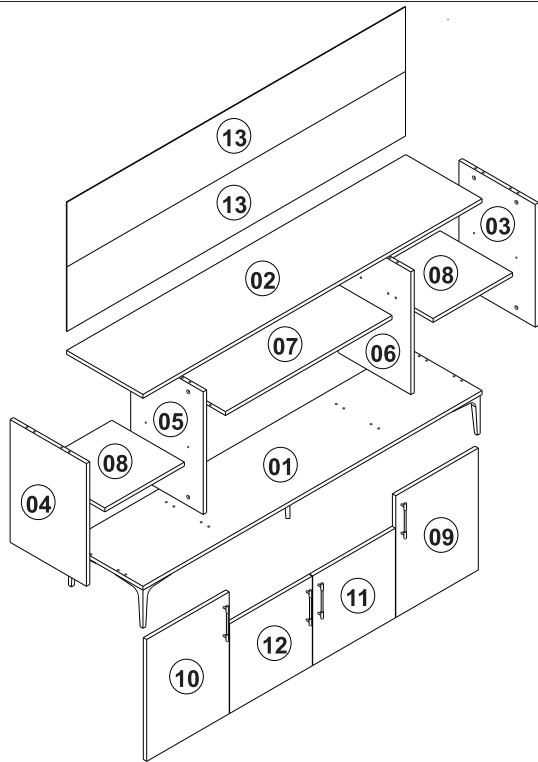


 

197-000179



Instruction Manual





A01 20x  *14 mm	A02 20x  *5x45 mm	A03 20x  *8x30 mm	A04 20x 
A09 30x  *4x25 mm	A10 16x  *4x20 mm	A11 4x 	A13 4x 
A14 4x 	A12 4x 	A28 20x 	A46 5x 
A40 4x 			



 
Important information
Read carefully.
Keep this information for further reference.

GB WARNING


Serious or fatal crushing injuries can occur from furniture tip-over. To prevent this furniture from tipping over it must be permanently fixed to the wall.

Fixing devices for the wall are not included since different wall materials require different types of fixing devices. Use fixing devices suitable for the walls in your home. For advice on suitable fixing systems, contact your local specialized dealer.


6.

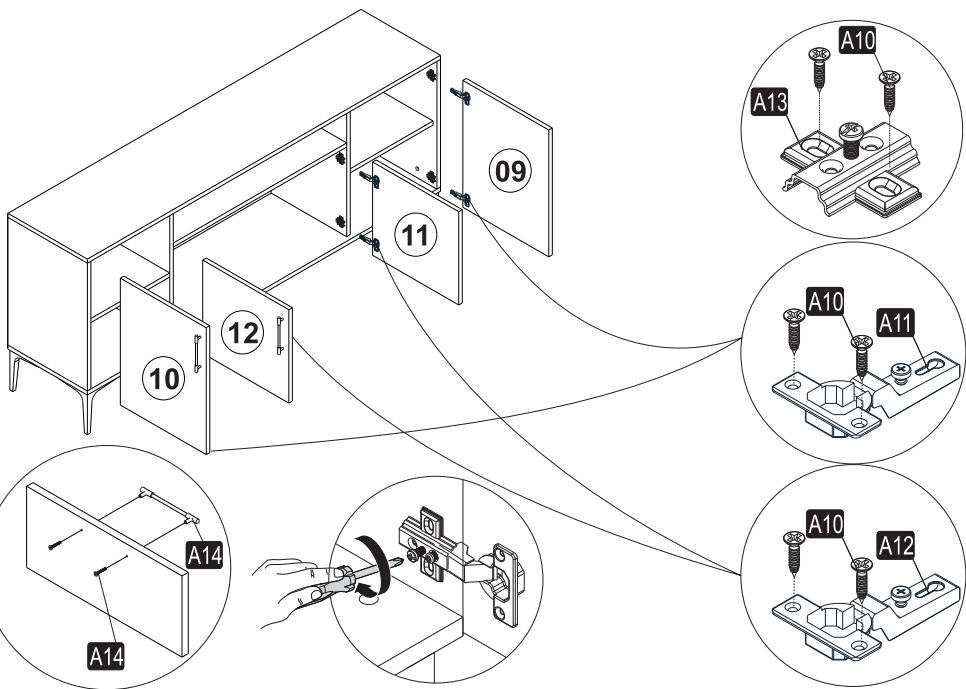




 
1.

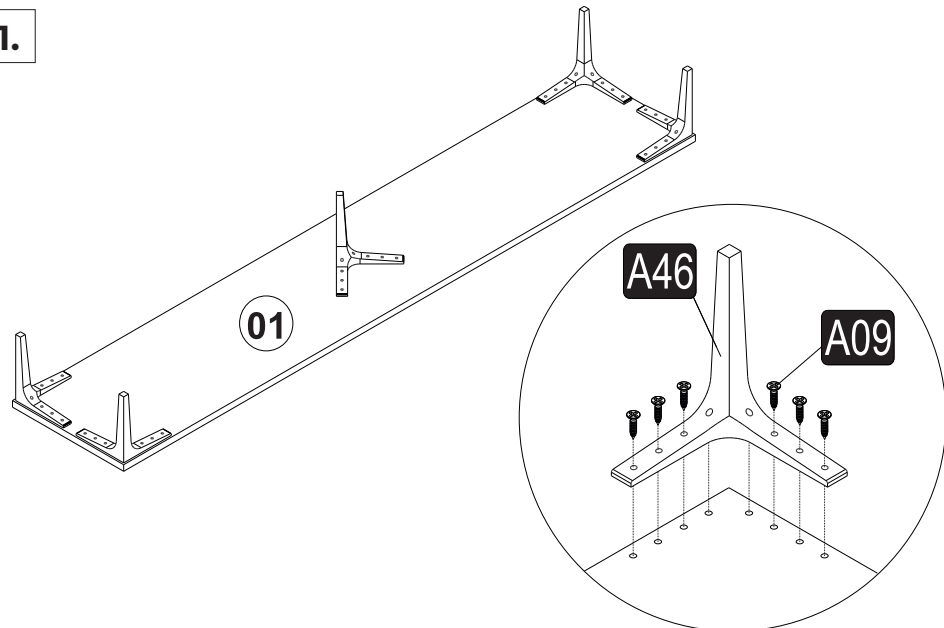

 
2.

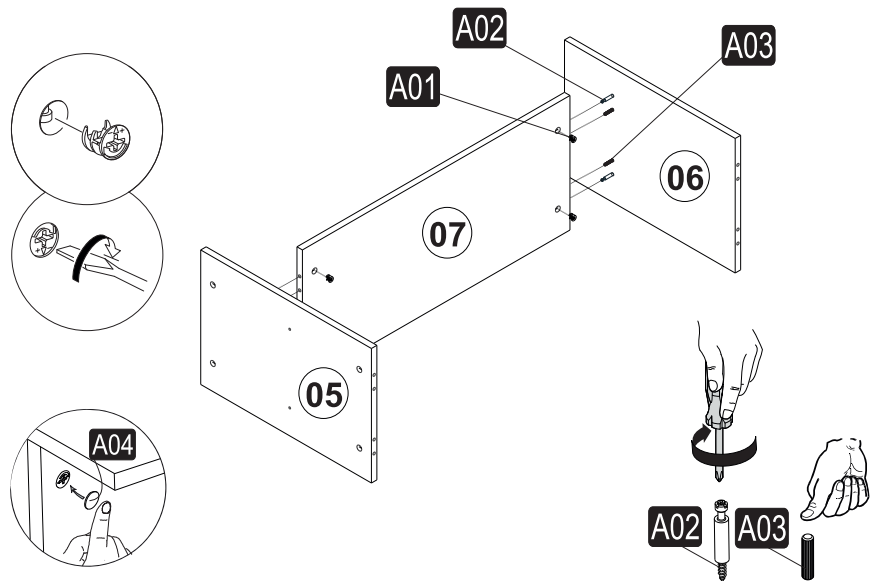

    3.

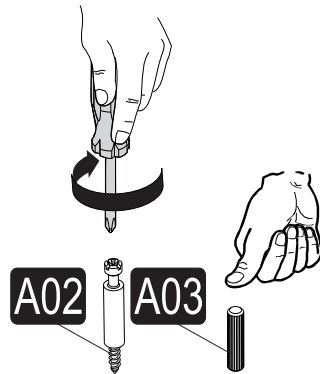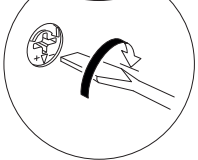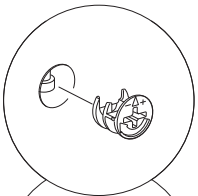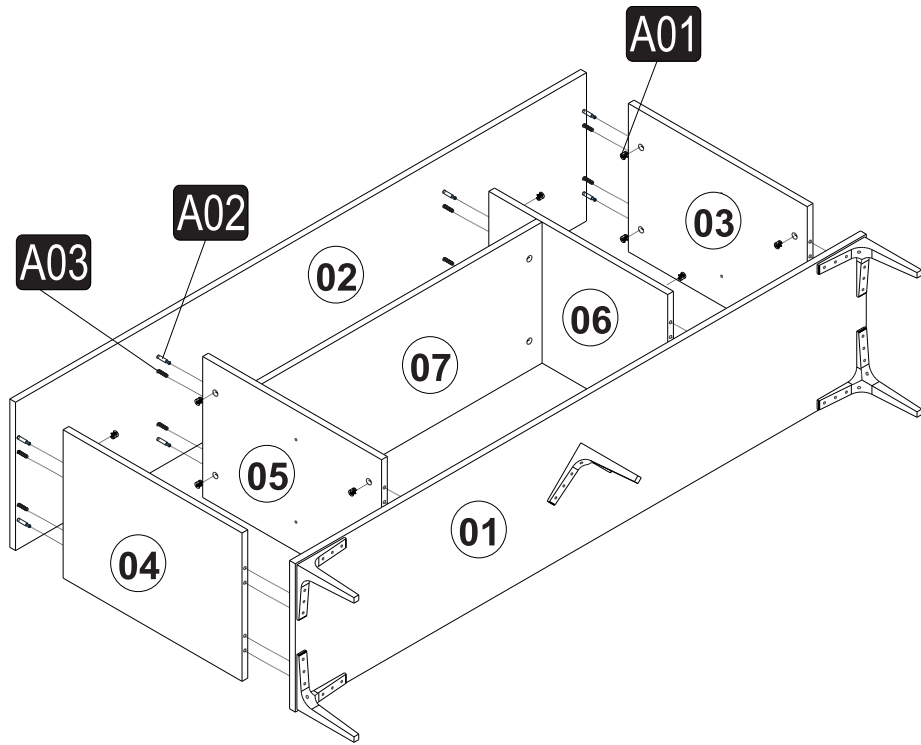

 4.

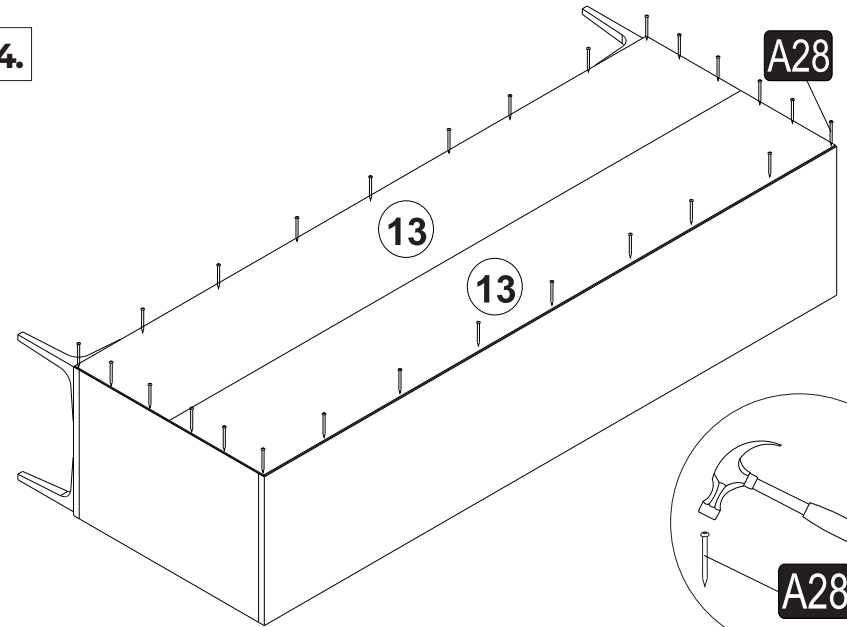

5.

