
 
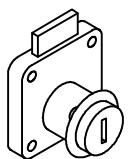
 
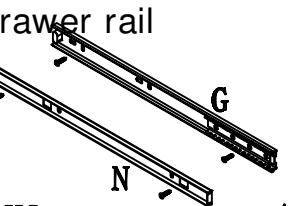

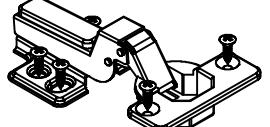
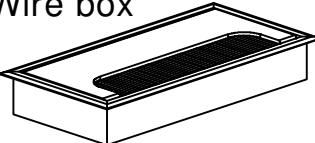
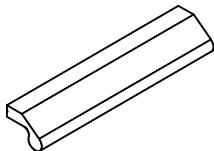
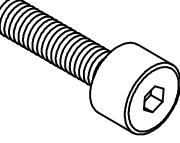
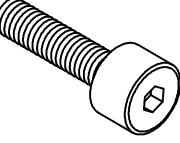
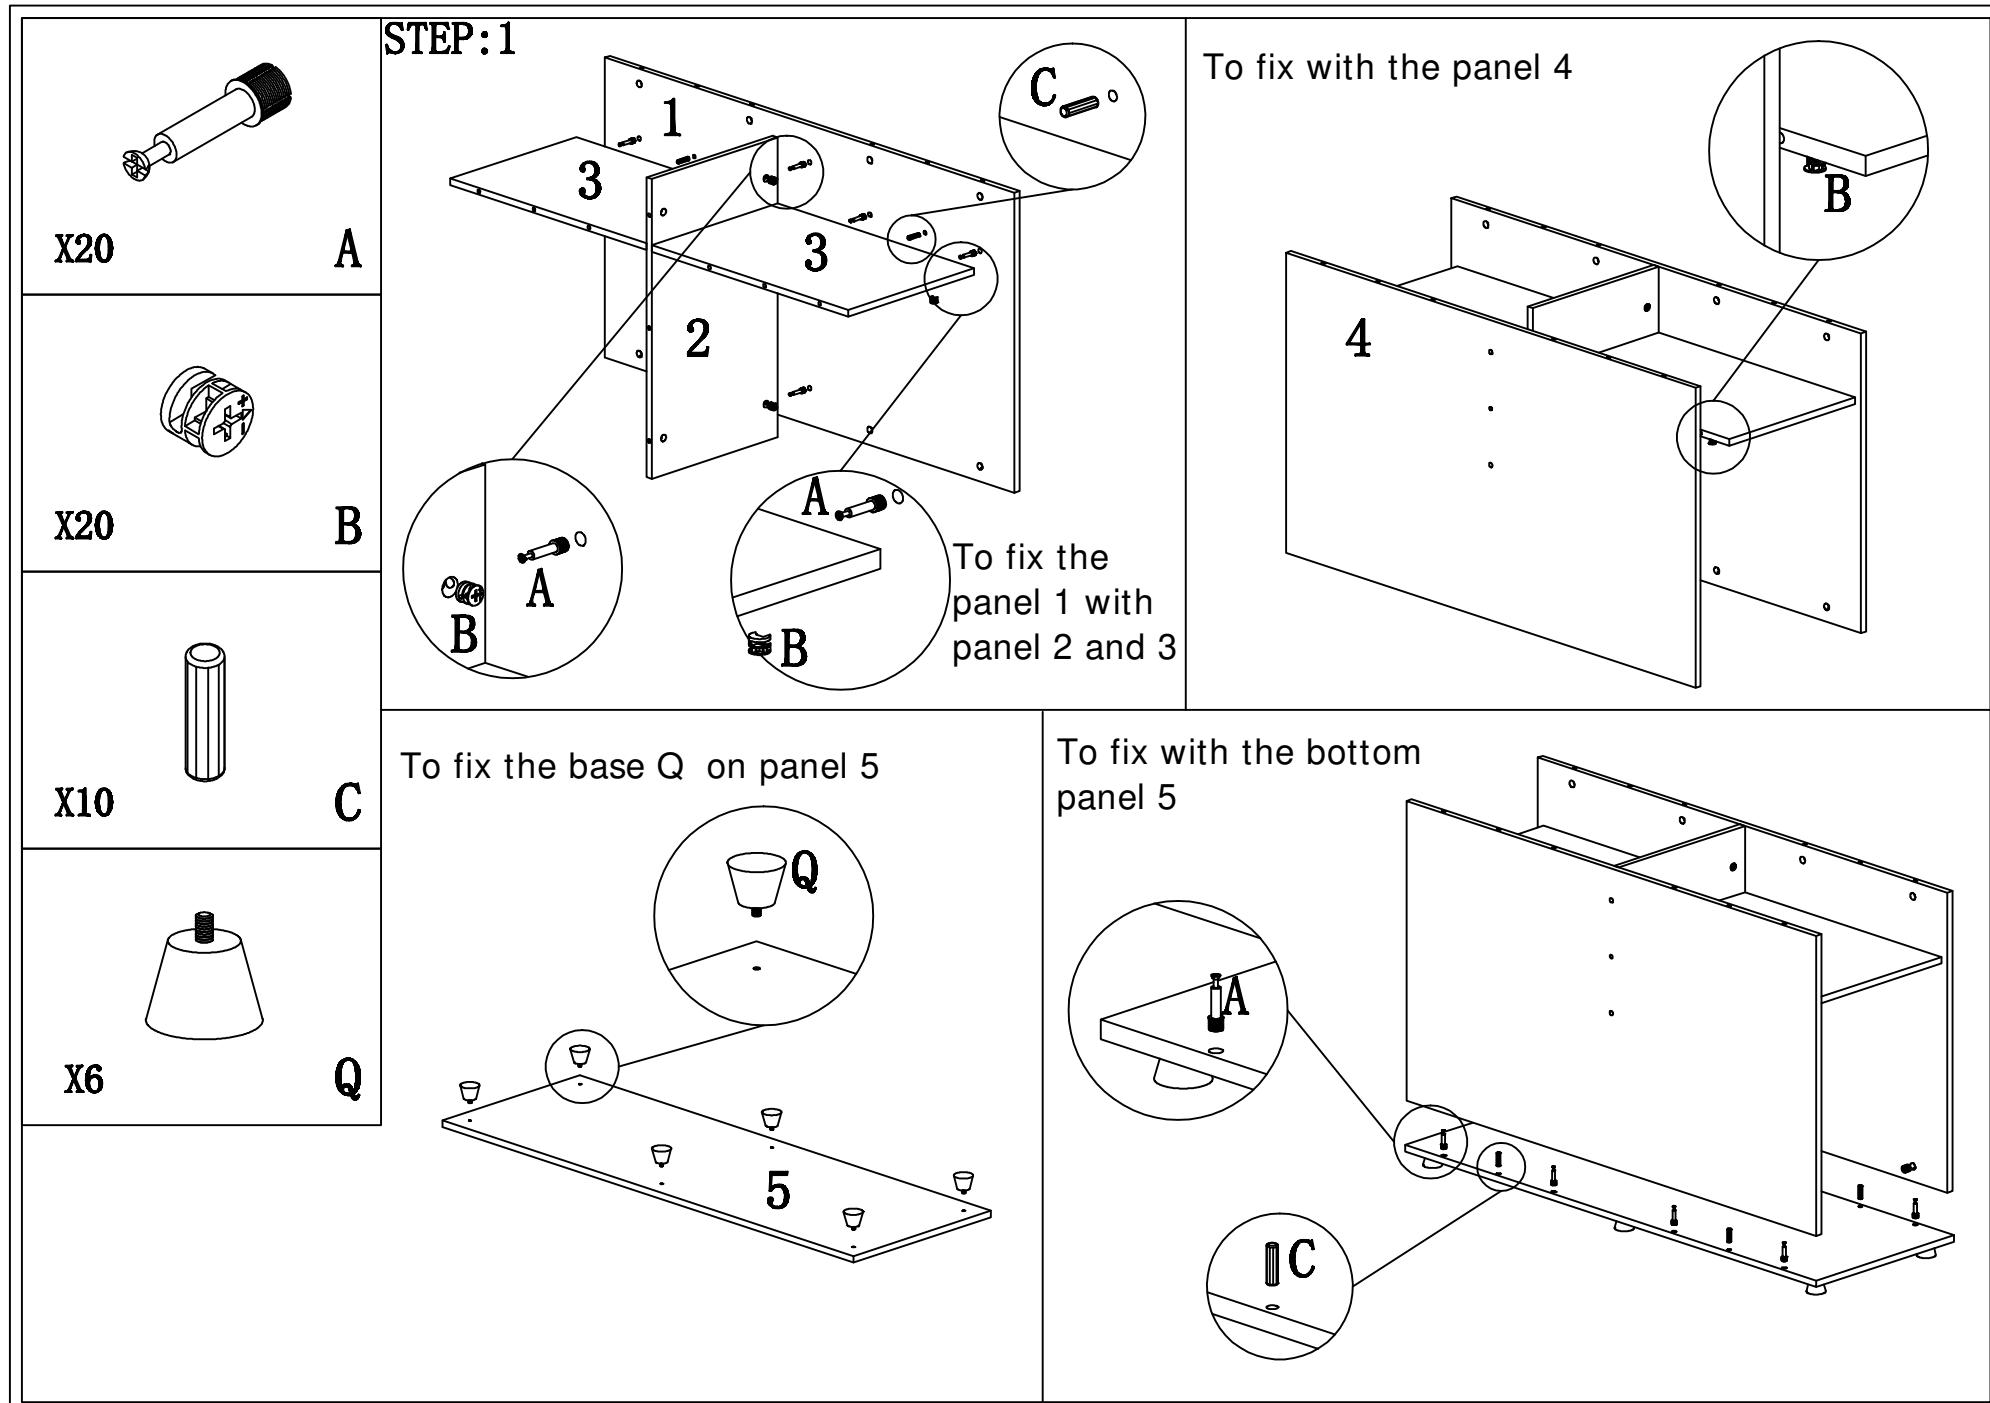
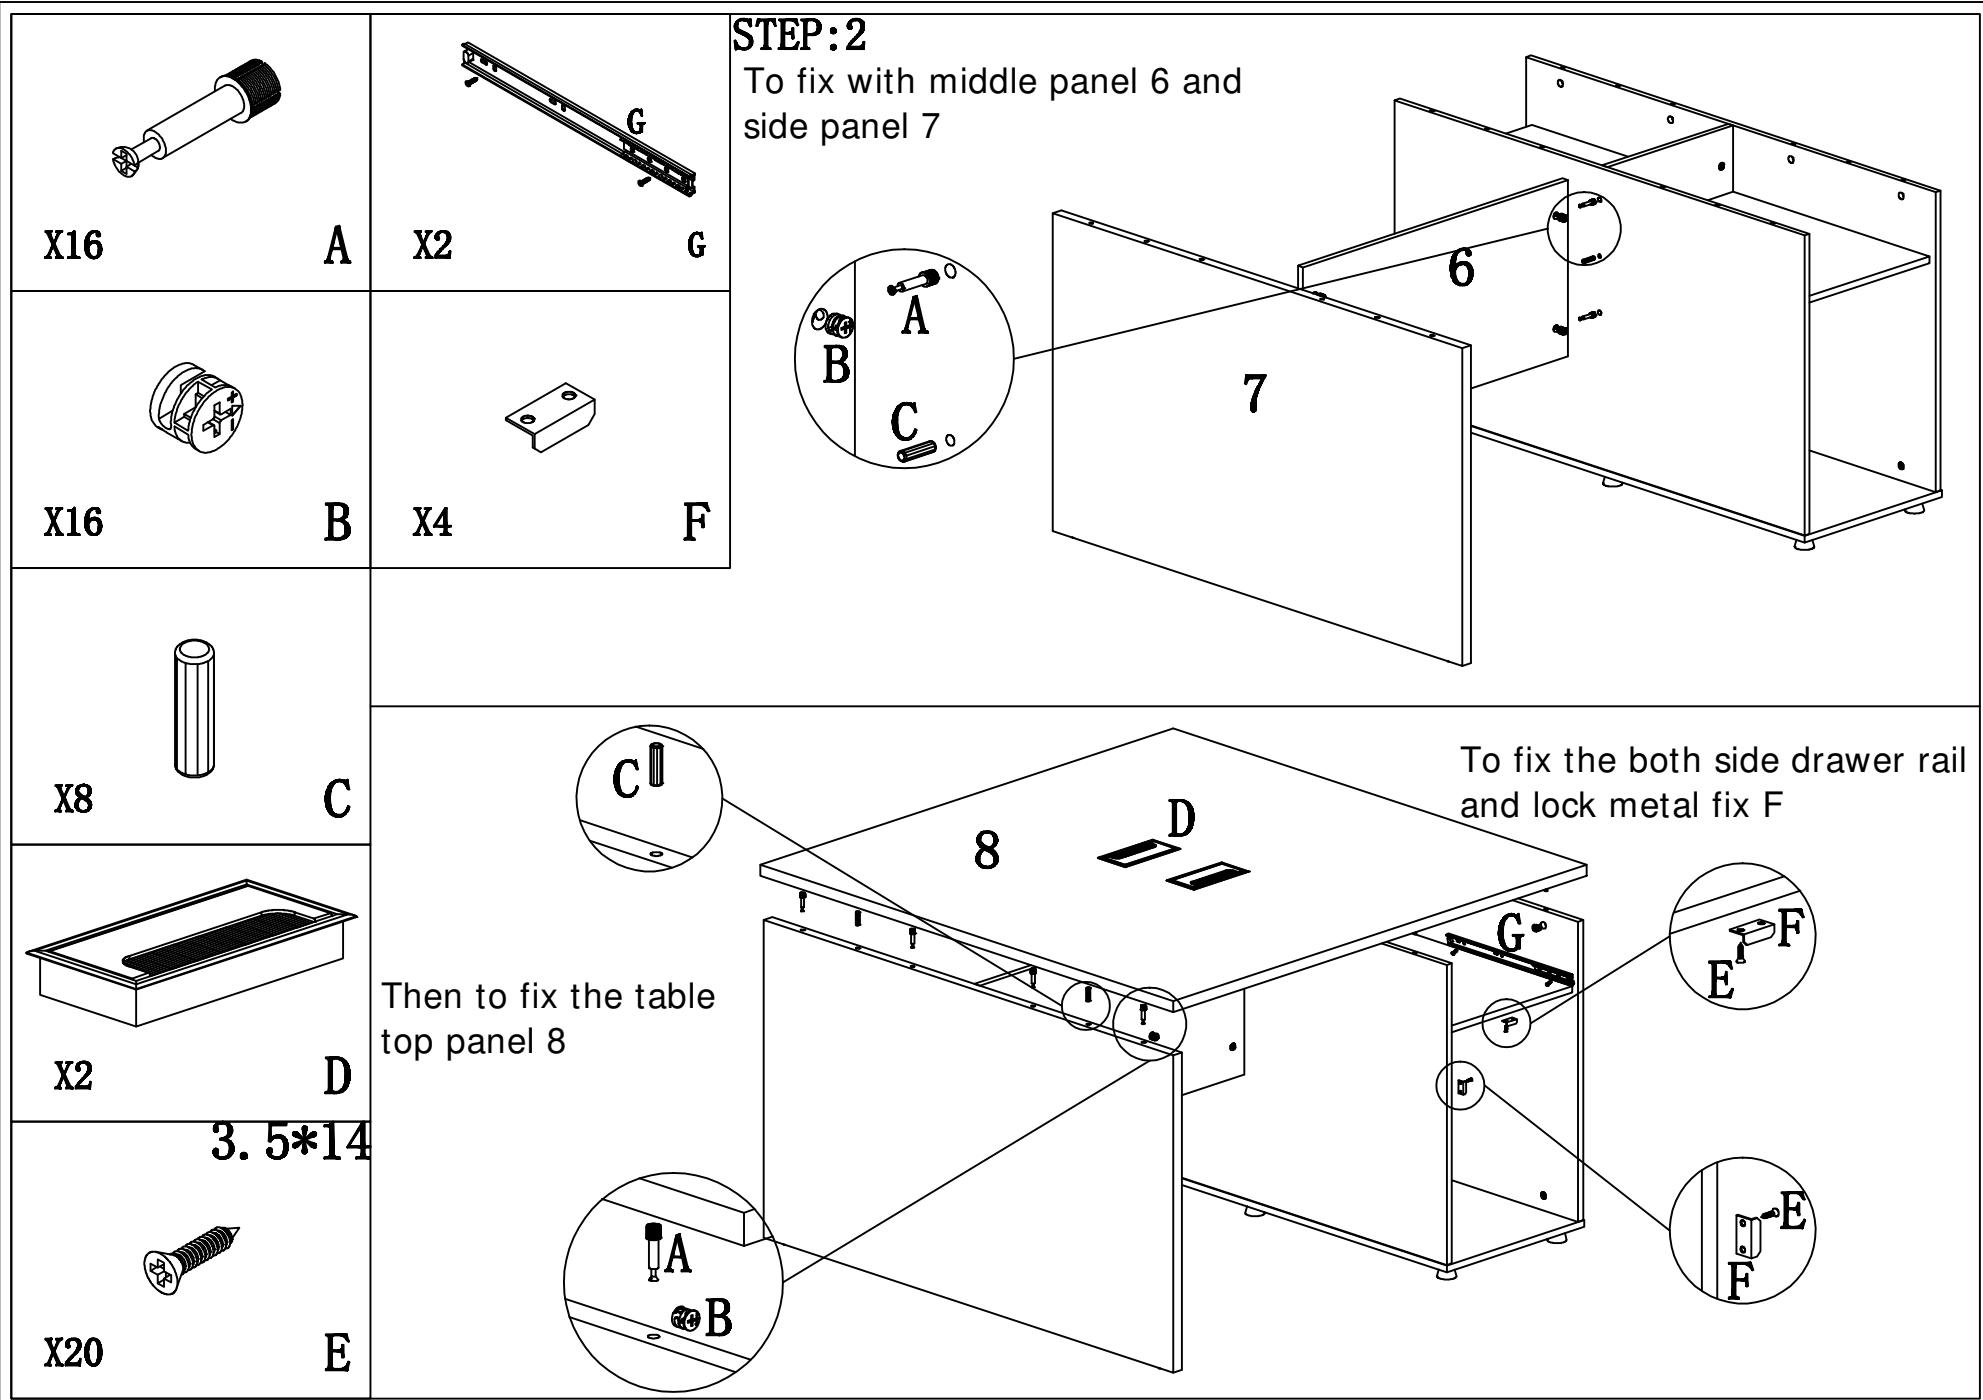
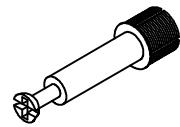
 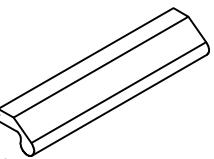
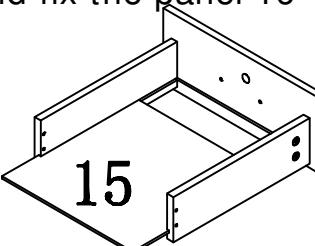

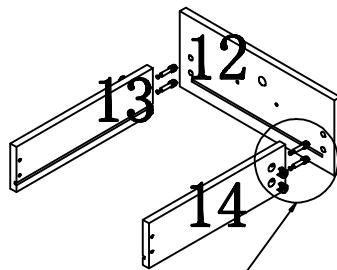
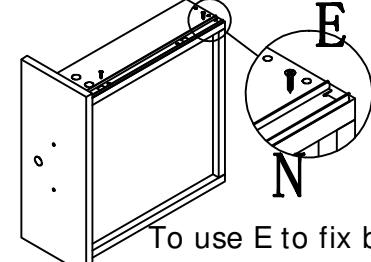
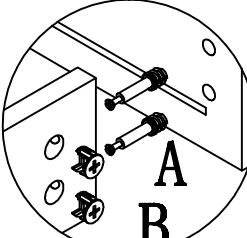
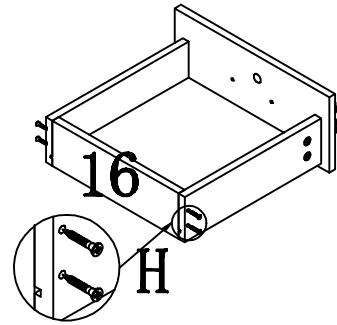
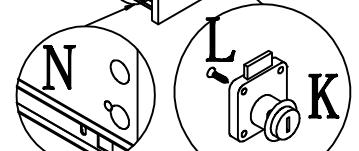
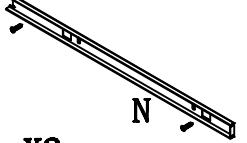
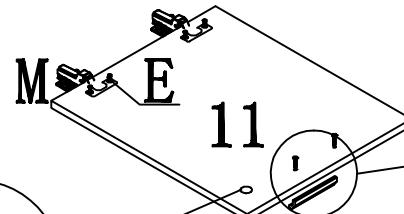
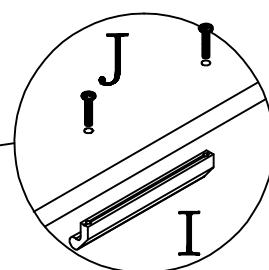
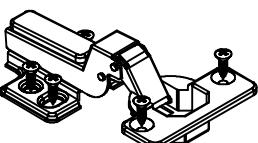


246-000033

Minifix Screw  X44	Lock metal fix  A X4	Lock  F X4	Base  K X6	
Minifix  X44	Drawer rail  B X2	Screw  G/N X20	4*20 Corner bracket metal fix  L X4	R
Wood Minifix  X18	Screw  C X8	4*30 Whole overlay hinge  H X4		
Wire box  X2	Handle  D X4	Screen base  I X2		
Screw  X68	3.5*14 Handle screw M*18  E X8	Handle screw M*18  J X2	Screen screw  P X2	(1200X1200X760)

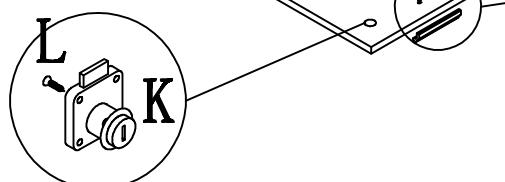

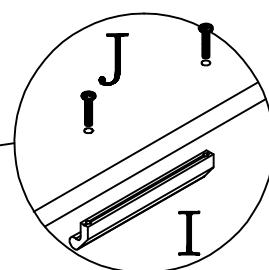

 <b>X8</b> <b>A</b>	 <b>X4</b> <b>I</b>	<b>STEP:3</b> To fix the panel 12,13,14	 <b>15</b> <b>16</b>	To put panel 15 inside and fix the panel 16
 <b>X8</b> <b>B</b>	 <b>X8</b> <b>J</b>	<b>M*18</b>	 <b>13</b> <b>12</b> <b>14</b>	 <b>E</b> <b>N</b> To use E to fix bottom panel four side more tough
 <b>X68</b> <b>E</b>	 <b>X4</b> <b>K</b>	<b>3.5*14</b>	 <b>A</b> <b>B</b>	 <b>H</b>  <b>L</b> <b>K</b> To fix the lock K and handle I
 <b>X2</b> <b>N</b>	 <b>X16</b> <b>L</b>	<b>4*20</b>	 <b>11</b>	 <b>M</b> <b>E</b> <b>J</b> <b>I</b>
 <b>X8</b> <b>H</b>	 <b>X4</b> <b>M</b>	<b>4*30</b>	 <b>L</b> <b>K</b> To fix the hinge M and handle I on door panel 11 Then to fix in cabinet	 <b>J</b> <b>I</b>


### 3. 5\*14STEP:4

To fix the table top screen

X16 E 4\*20



X2	P
X4	L
X2	O
X4	R

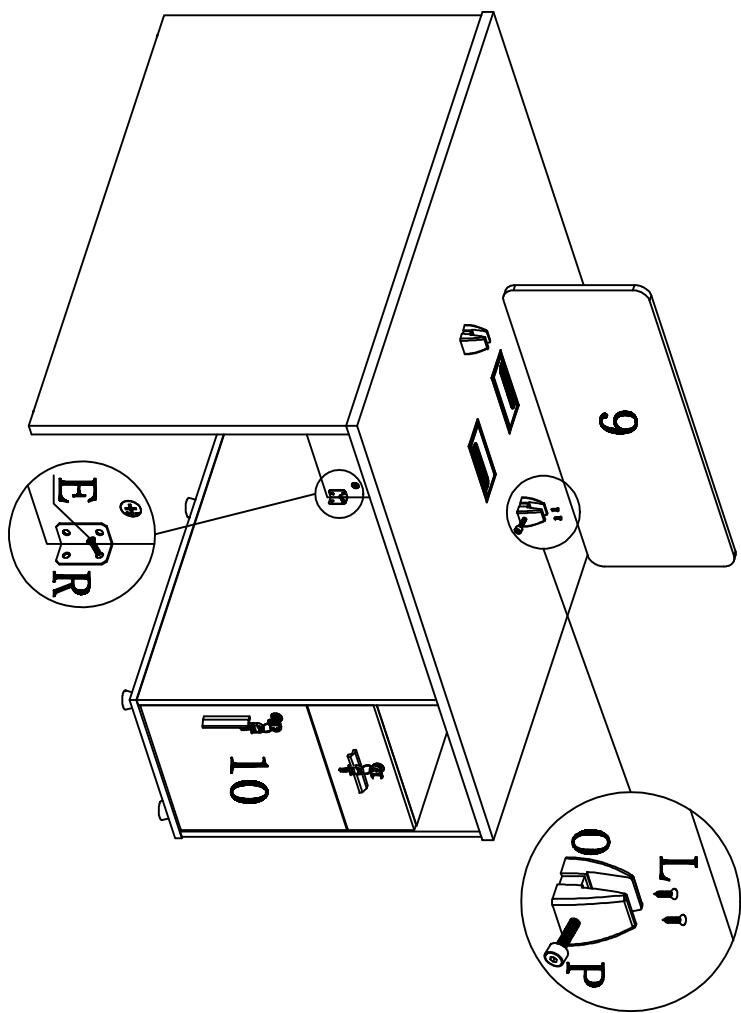

To use corner bracket metal fix R to fix  
middle panel both side more stable

**FINISH**