
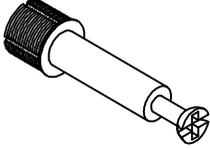
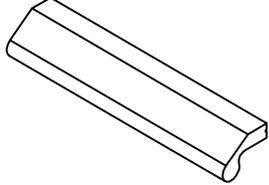
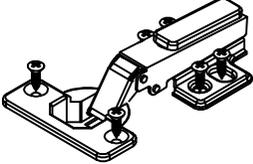
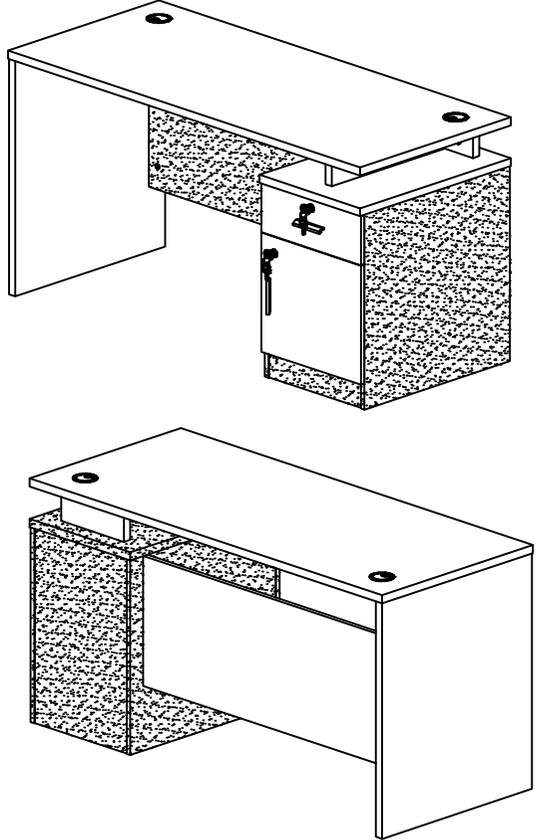


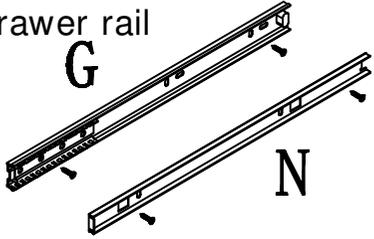
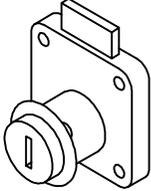
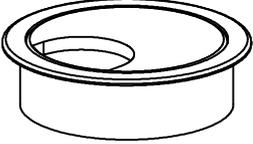
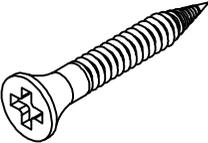


246-000025

<p>Minifix Screw</p>  <p>X37 A</p>	<p>Screw 3.5*14</p>  <p>X26 E</p>	<p>Handle</p>  <p>X2 I</p>	<p>Full overlay hinge</p>  <p>X2 M</p>	
<p>Minifix</p>  <p>X37 B</p>	<p>Lock metal minifix</p>  <p>X2 F</p>	<p>Handle screw M*18</p>  <p>X4 J</p>		
<p>Wood Minifix</p>  <p>X8 C</p>	<p>Drawer rail G</p>  <p>X1 G/N</p>	<p>Lock</p>  <p>X2 K</p>		
<p>Wire box</p>  <p>X2 D</p>	<p>Screw 4*30</p>  <p>X4 H</p>	<p>Screw 4*20</p>  <p>X8 L</p>		


STEP: 1

To fix the panel 3 and panel 4,
then to fix panel 2 ,final to fix the panel 1

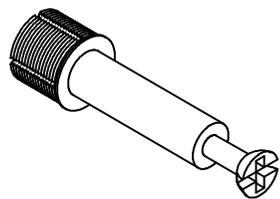

X6

A

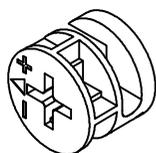






X6

B



X2

C

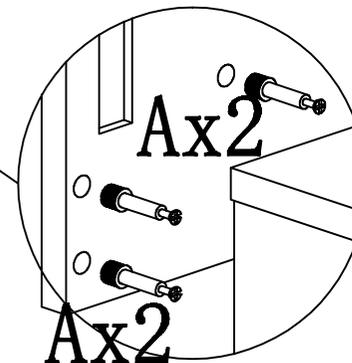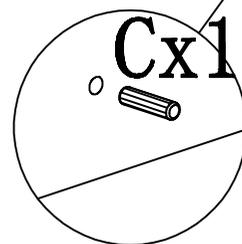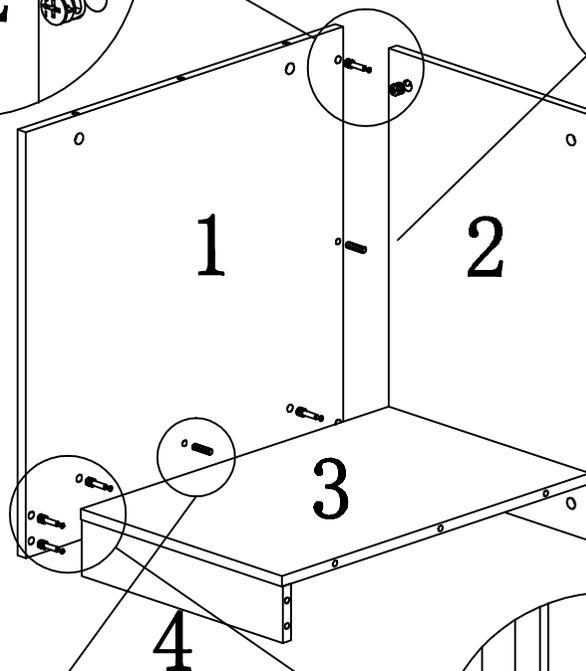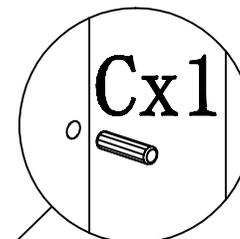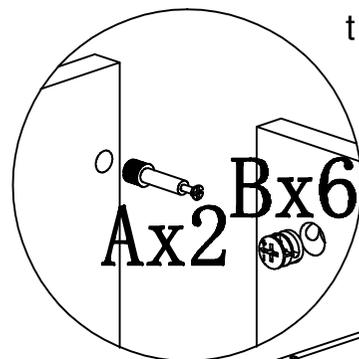

STEP : 2

To fix the side panel 5




X6

A




X6

B



X2

C

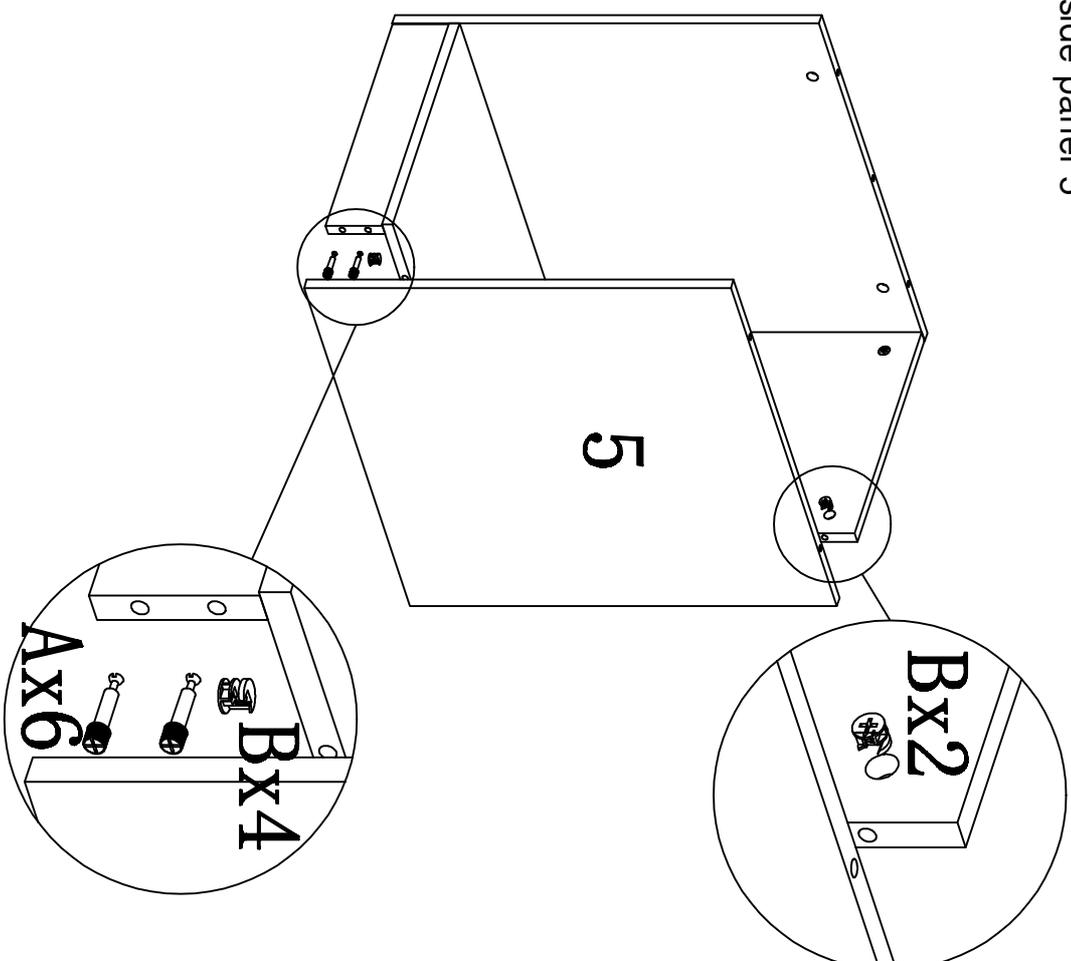

STEP : 3

To fix the upper panel 6




X4

A




X4

B



X2

C

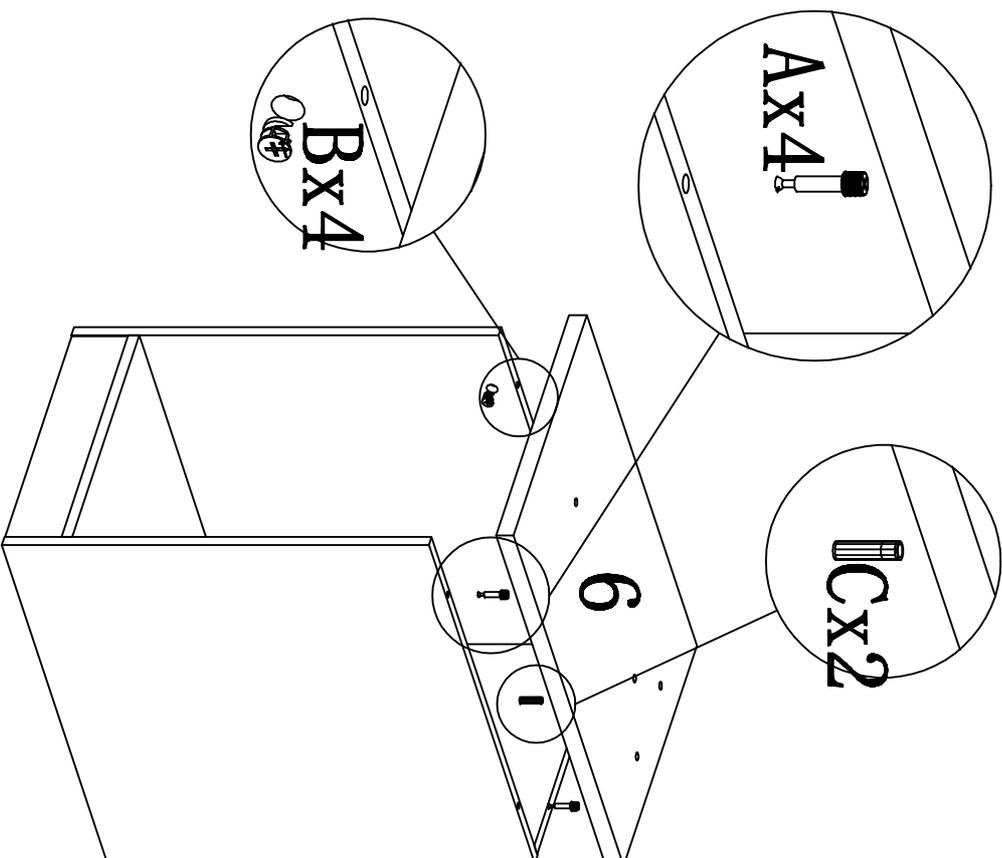

STEP : 4

To fix the support panel 7 and panel 8





X1

A



X1

B

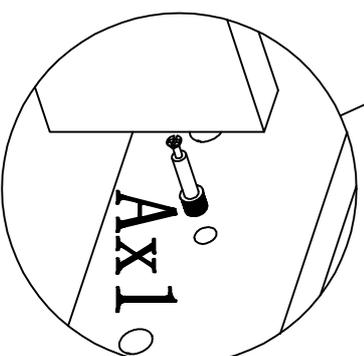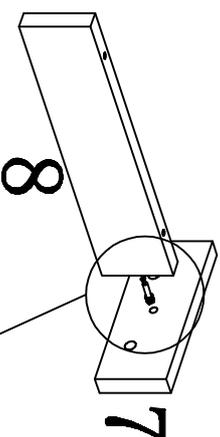

STEP : 5

To fix the support frame on upper panel 6




X4

A




X4

B

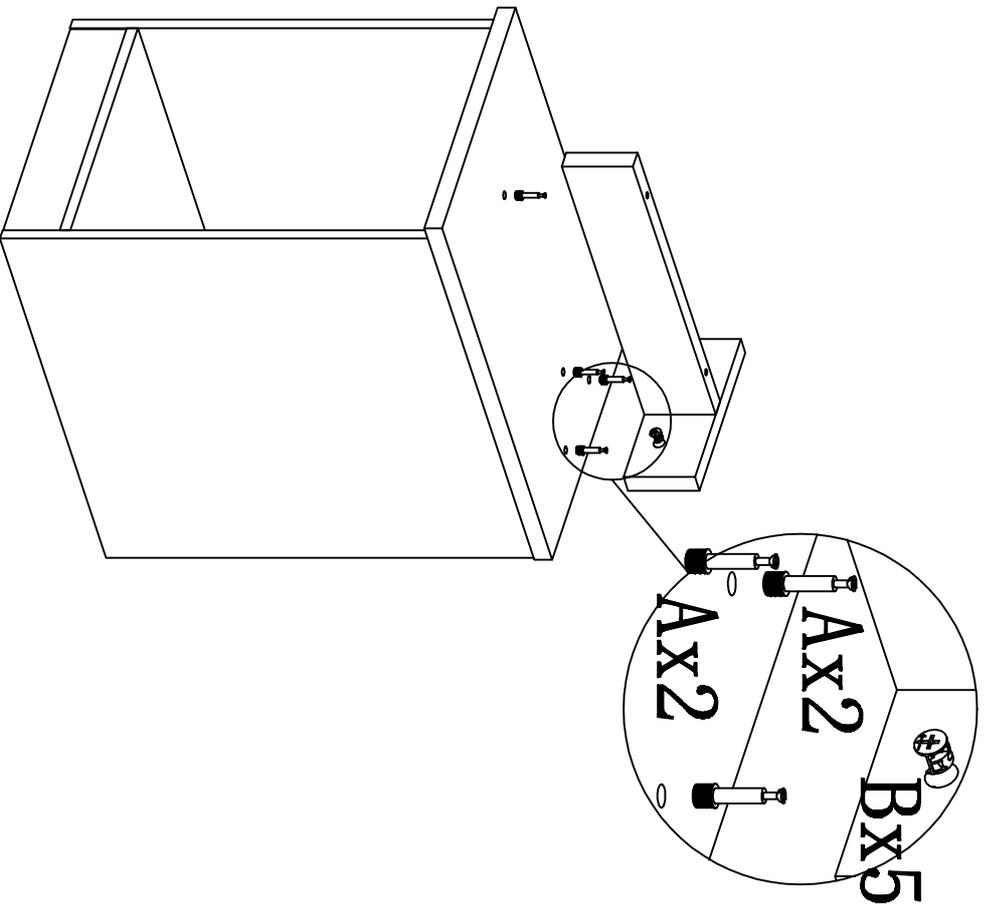


STEP:6 To fix the front panel 9 and side panel 10

To fix the supprt panel 55

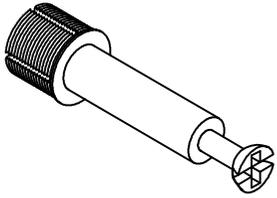


X8

A

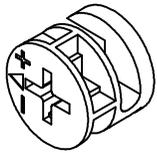



X8

B



X2

C

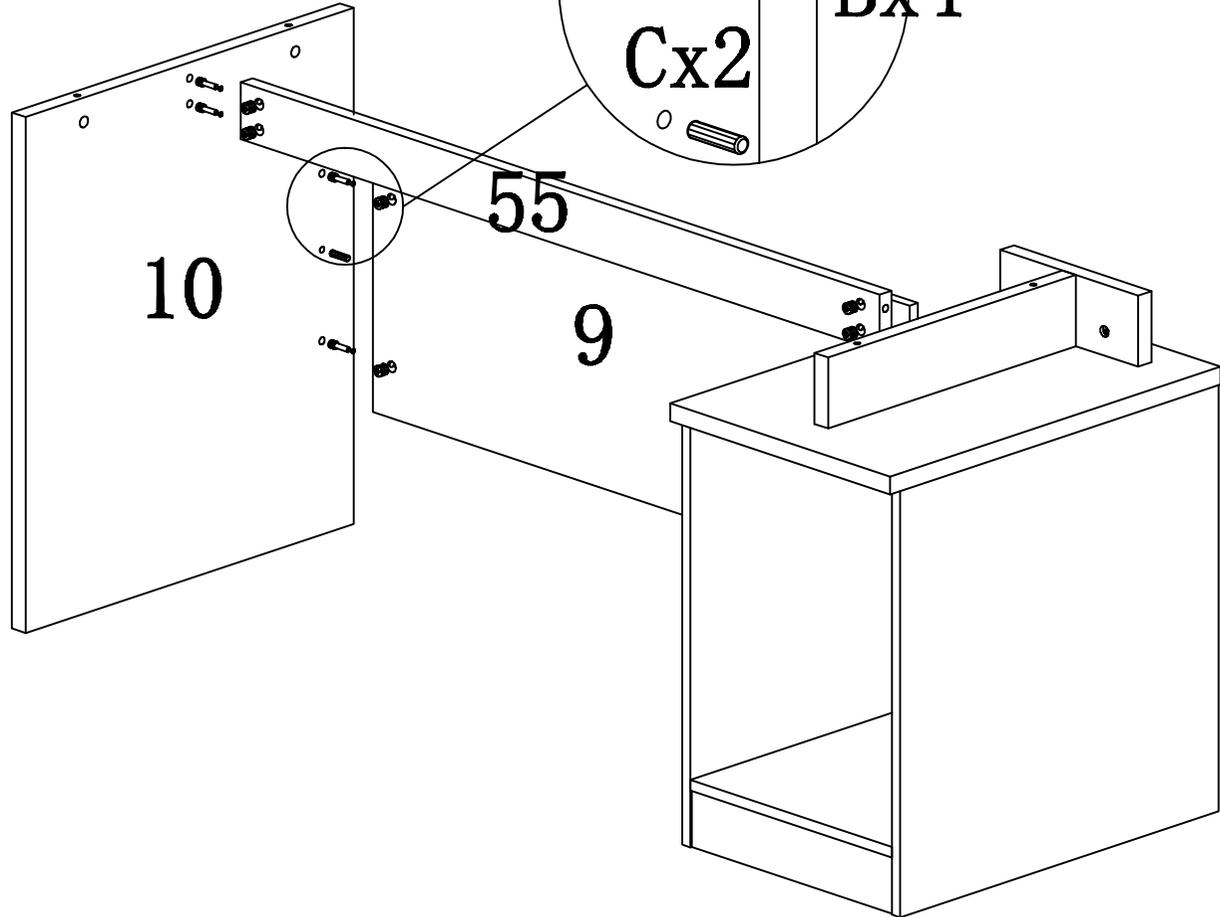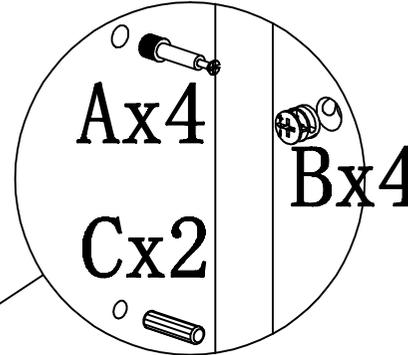


STEP : 7 To put the mixix B on both side



X4

B

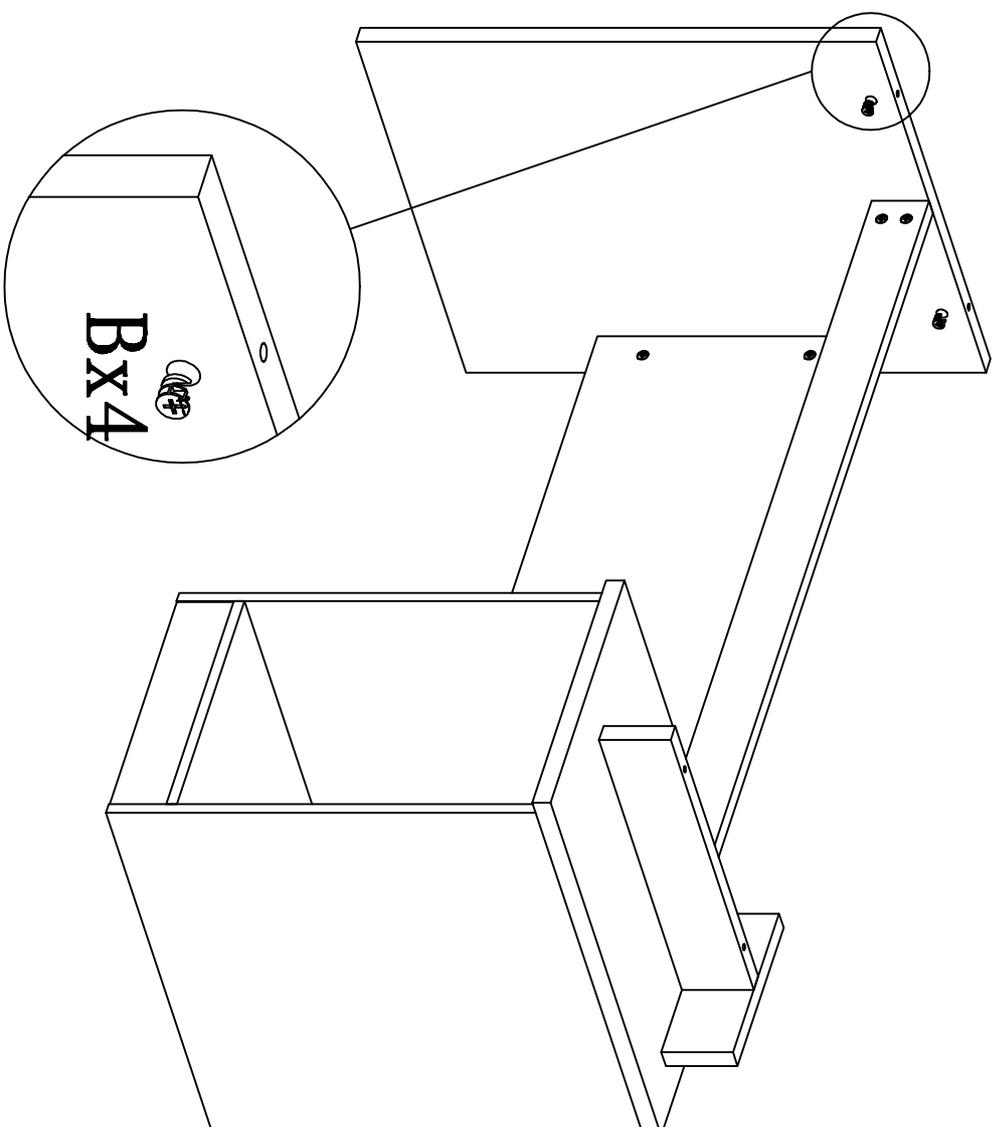


STEP: 8

To fix the mixfix screw A on table top panel 11




X4

A

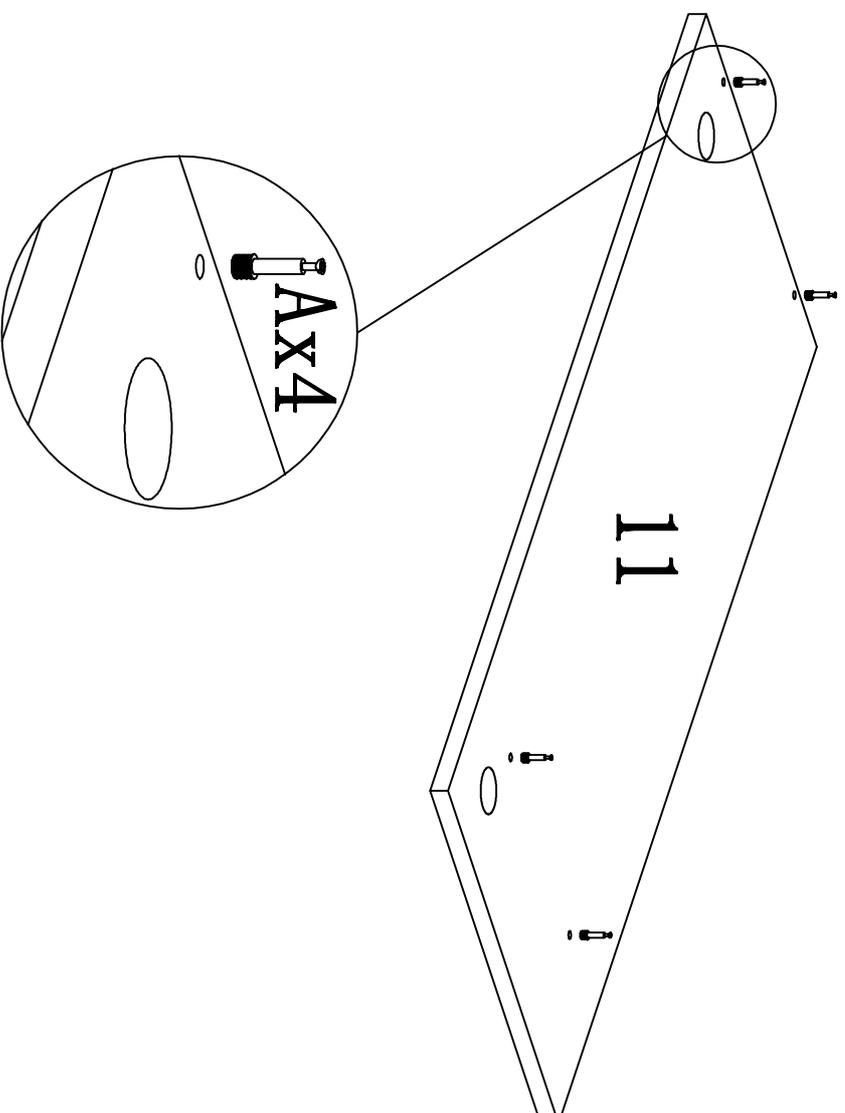


3.5*14 STEP:9




X8

E




X2

F

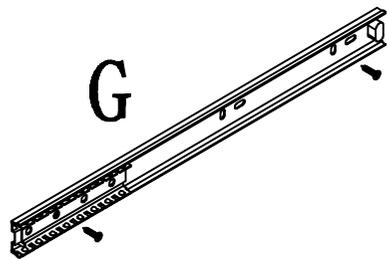

X1

G

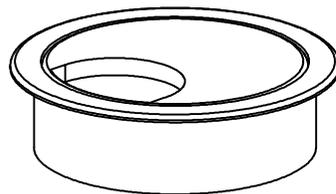

X2

D

To fix the drawer rail G on both side

To fix the lock metal support F

Dx1

Fx1+Ex2


Dx1


Gx2

Ex2

Fx1+Ex2

To fix the lock metal support F

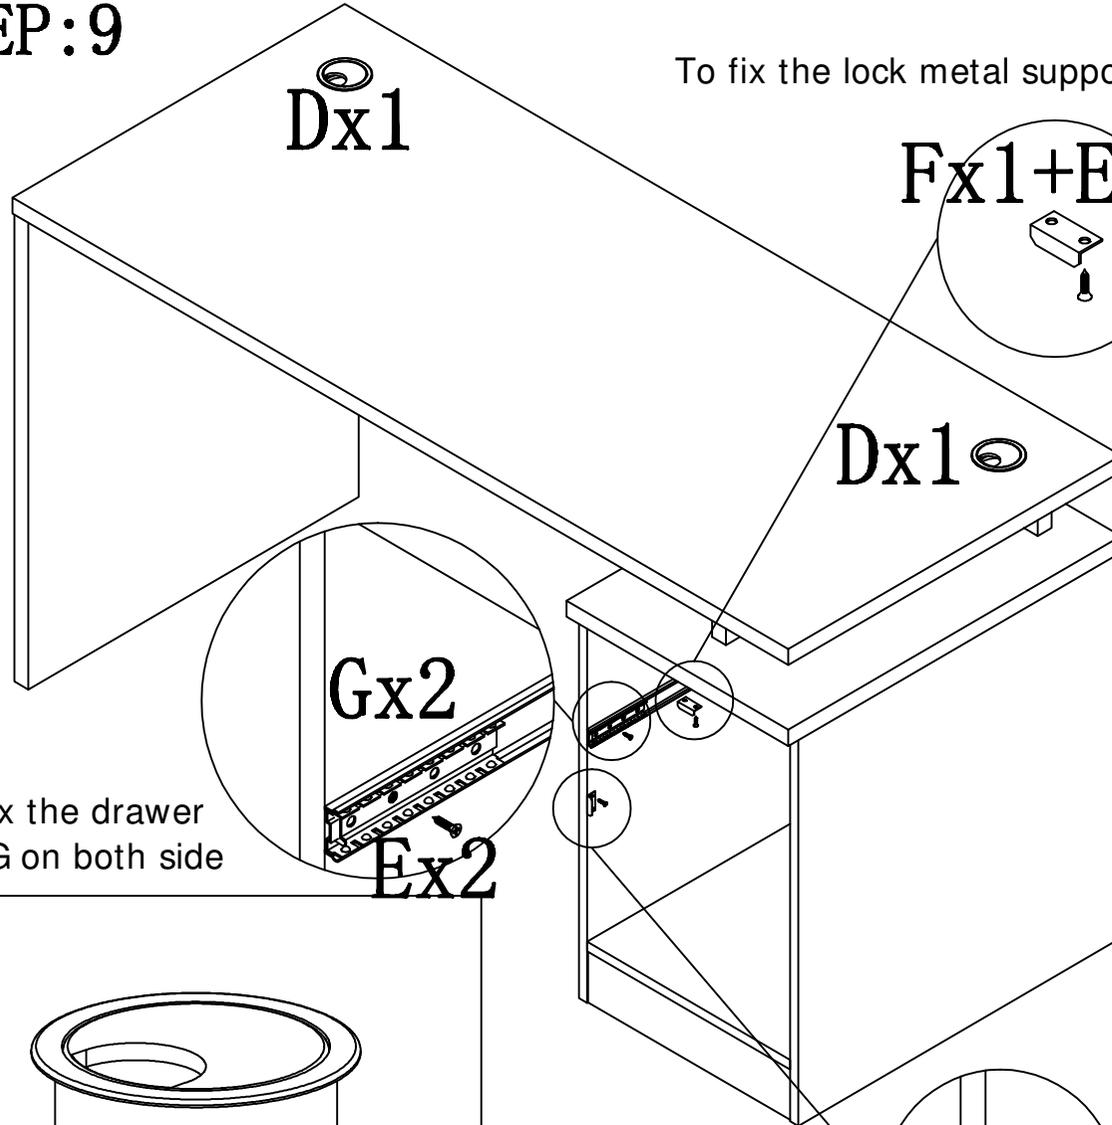

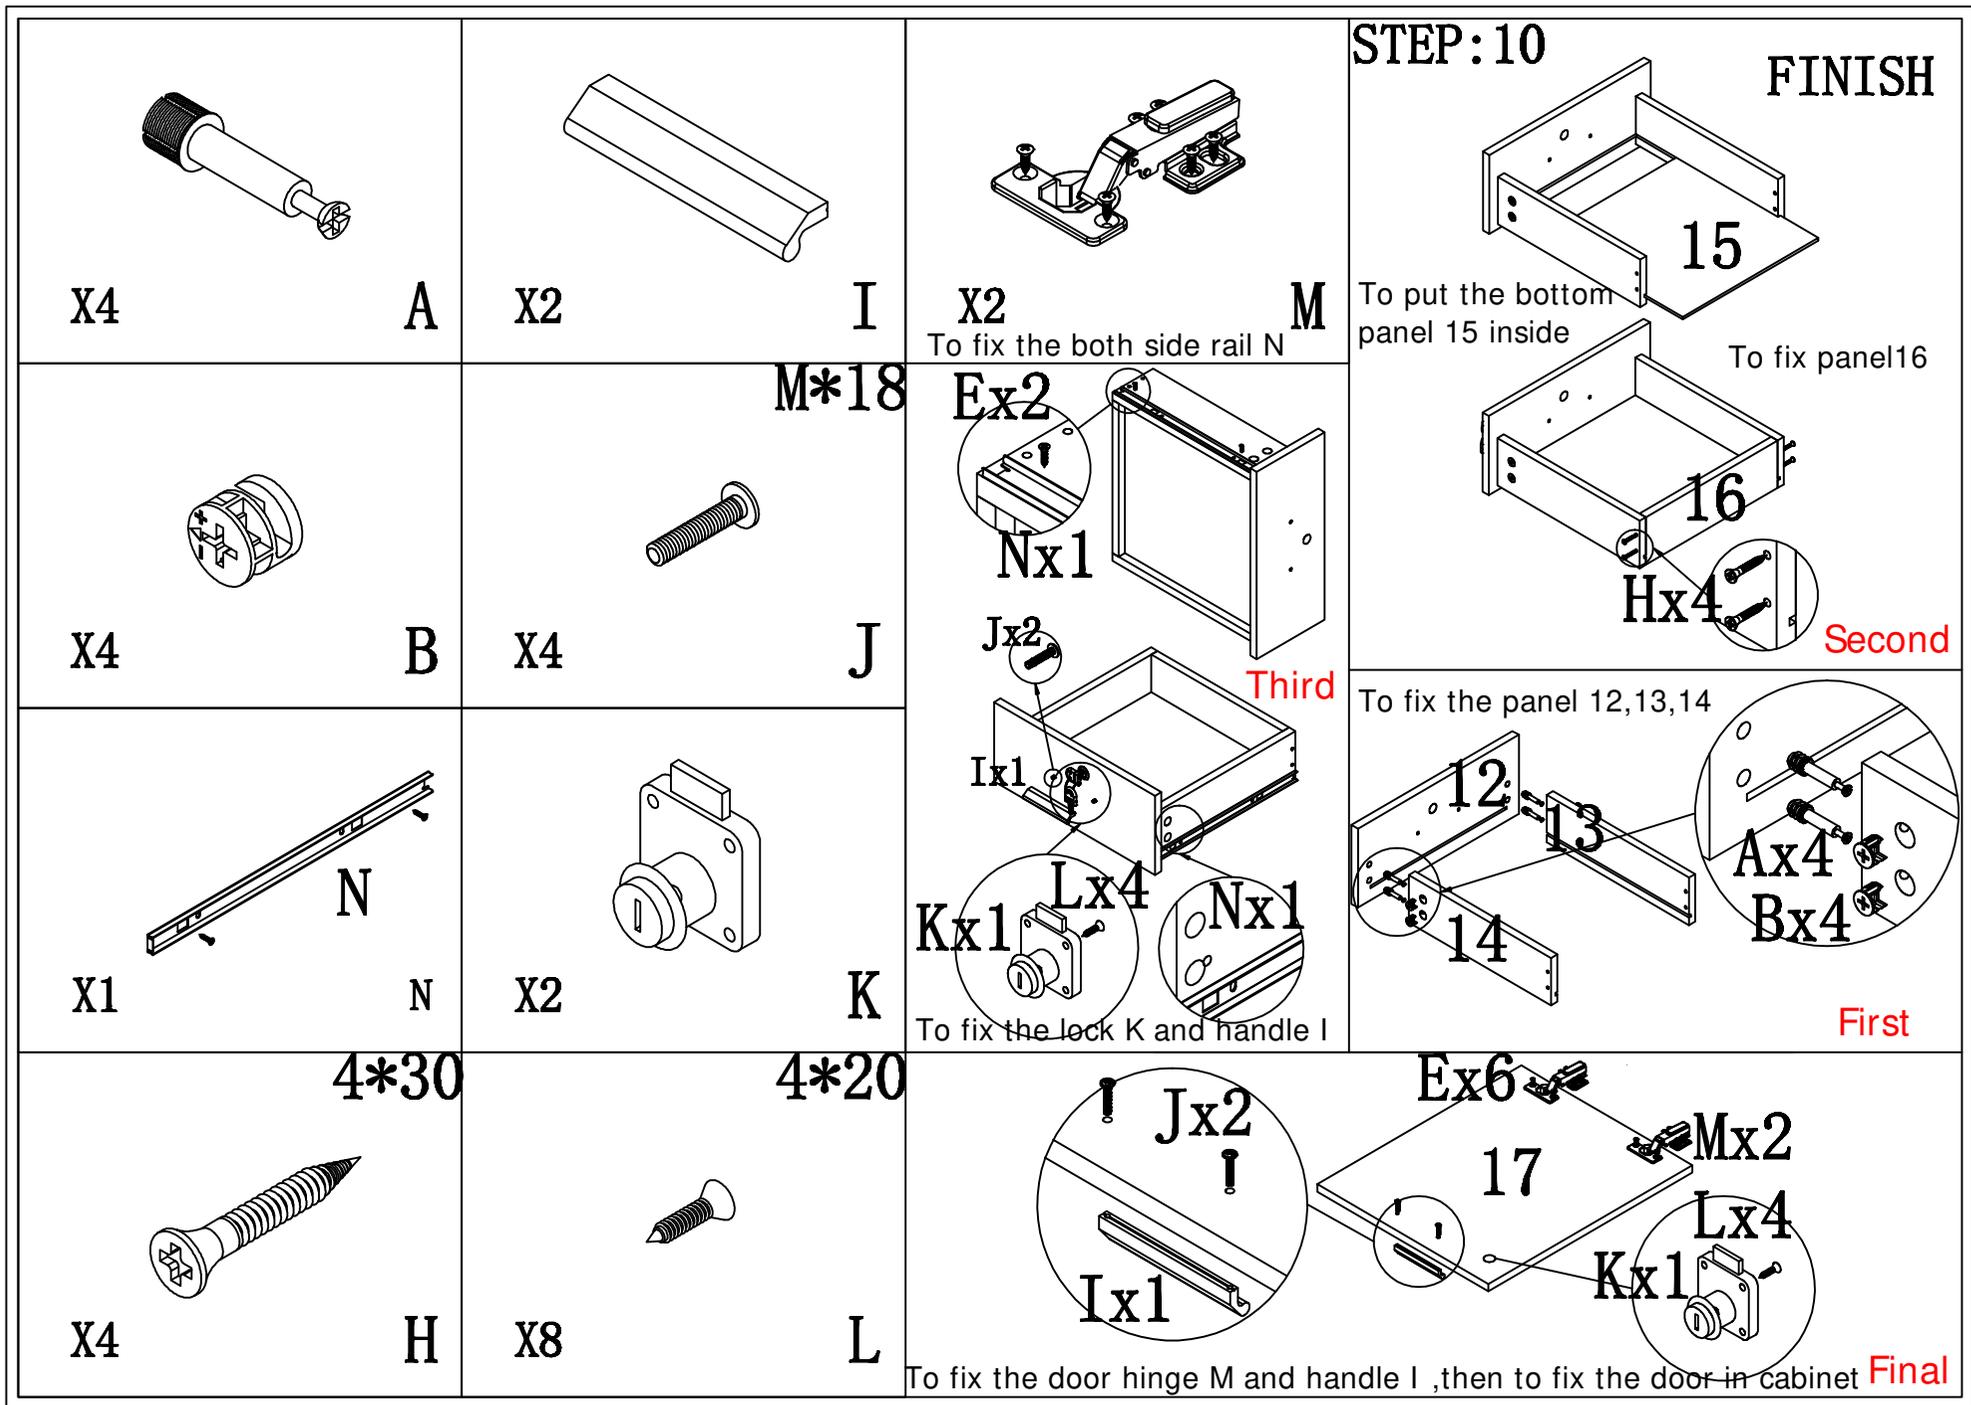

Remark:In third ,to use screw L to fix bottom panel 15 four side more tough