

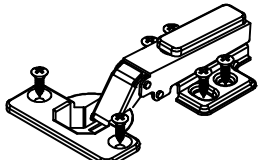
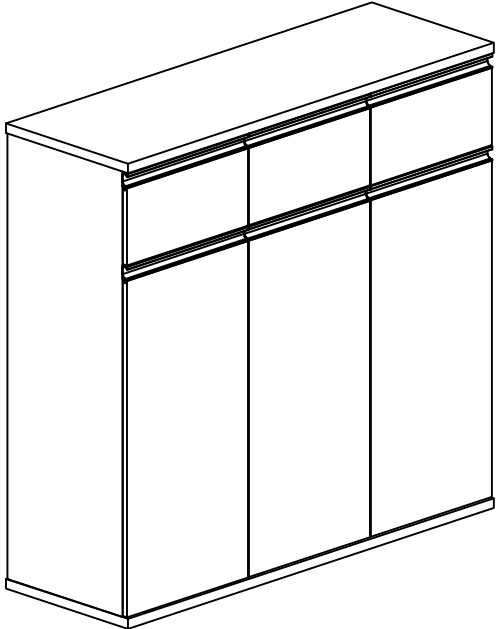
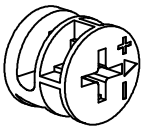



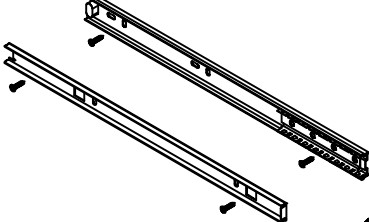
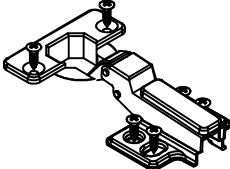
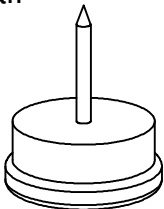

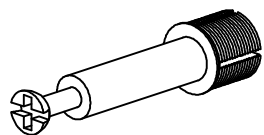
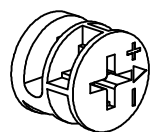


<div>Minifix Screw</div> <div></div> <div>X64A</div>	<div>Screw 3.5*14</div> <div></div> <div>X78E</div>	<div>Full overlay hinge</div> <div></div> <div>X4I</div>	<div></div> <div>(1200X400X1200)</div>
<div>Minifix</div> <div></div> <div>X64B</div>	<div>Screw 4*30</div> <div></div> <div>X12F</div>	<div>Back panel rubber fix</div> <div></div> <div>X12J</div>	
<div>Wood Minifix</div> <div></div> <div>X14C</div>	<div>Drawer rail</div> <div></div> <div>X3G</div>	<div>Half overlay hinge</div> <div></div> <div>X2K</div>	
<div>Base nail</div> <div></div> <div>X6D</div>	<div>Shelves fix screw</div> <div></div> <div>X24H</div>		

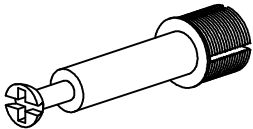


X12

A



X12

B




X2


C


STEP: 1

To fix the panel 1 and panel 3,
then to fix panel 2

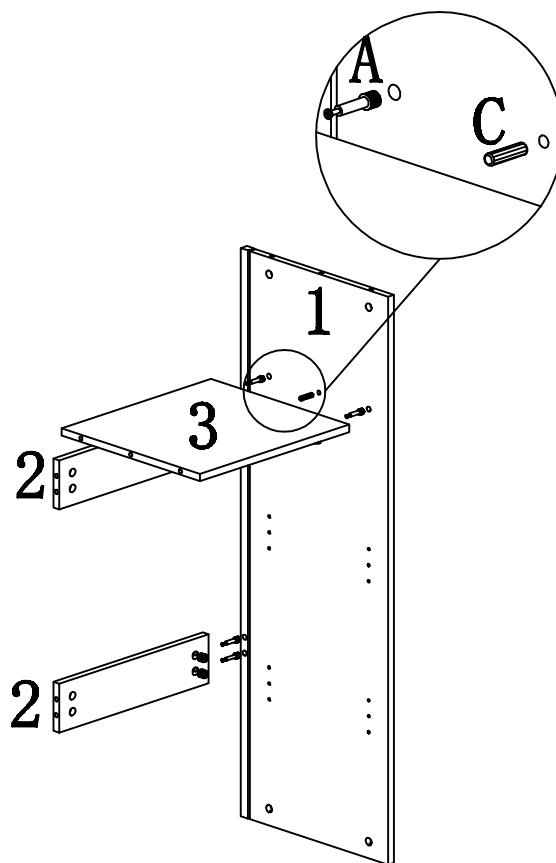


To fix the panel 4

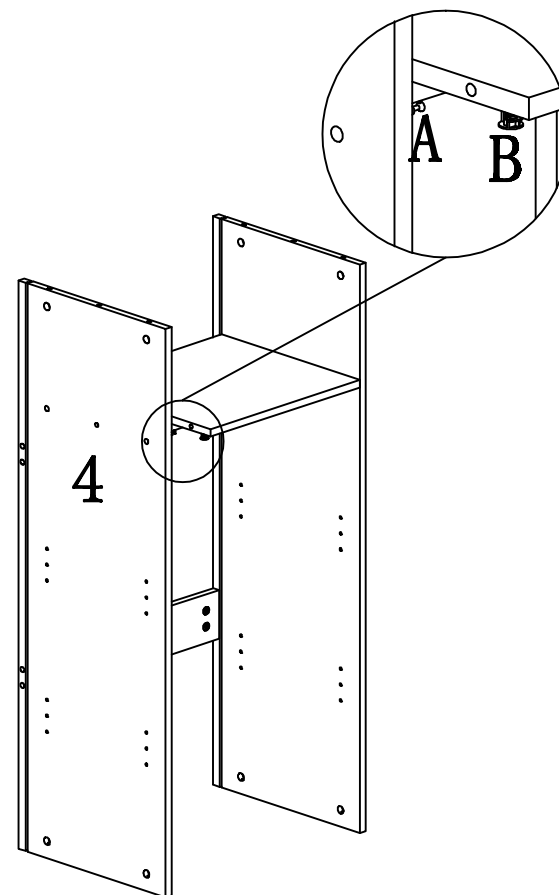

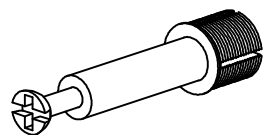


X24

A

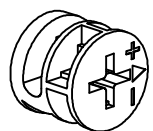

X24

B




X4


C

STEP:2

To fix the panel 6 ,then to fix the panel 5

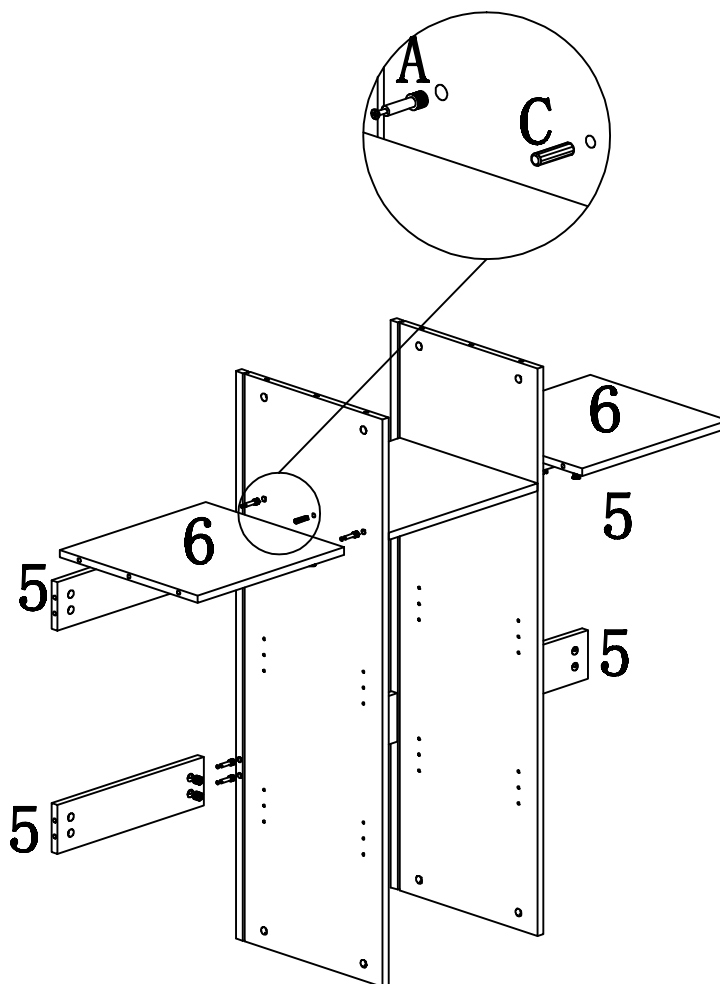


To fix both side
panel 7 and panel 8

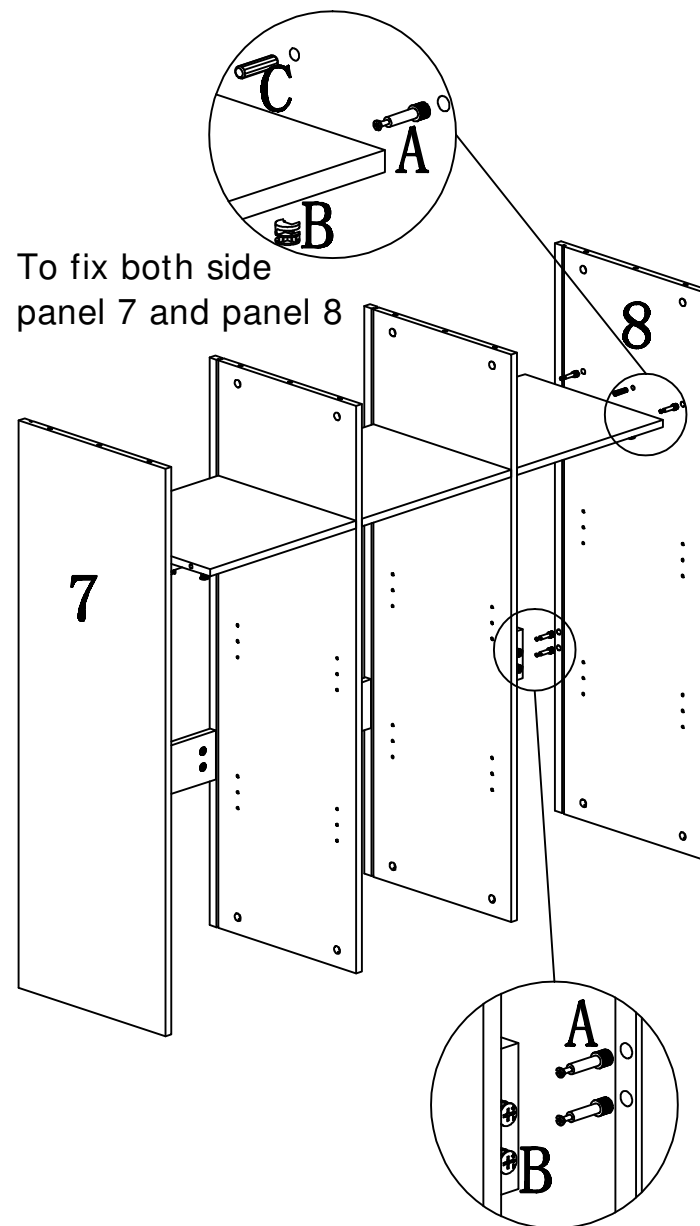

STEP:3


To fix the bottom panel 9

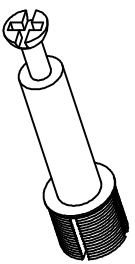


X8
A



X8
B




X4
C

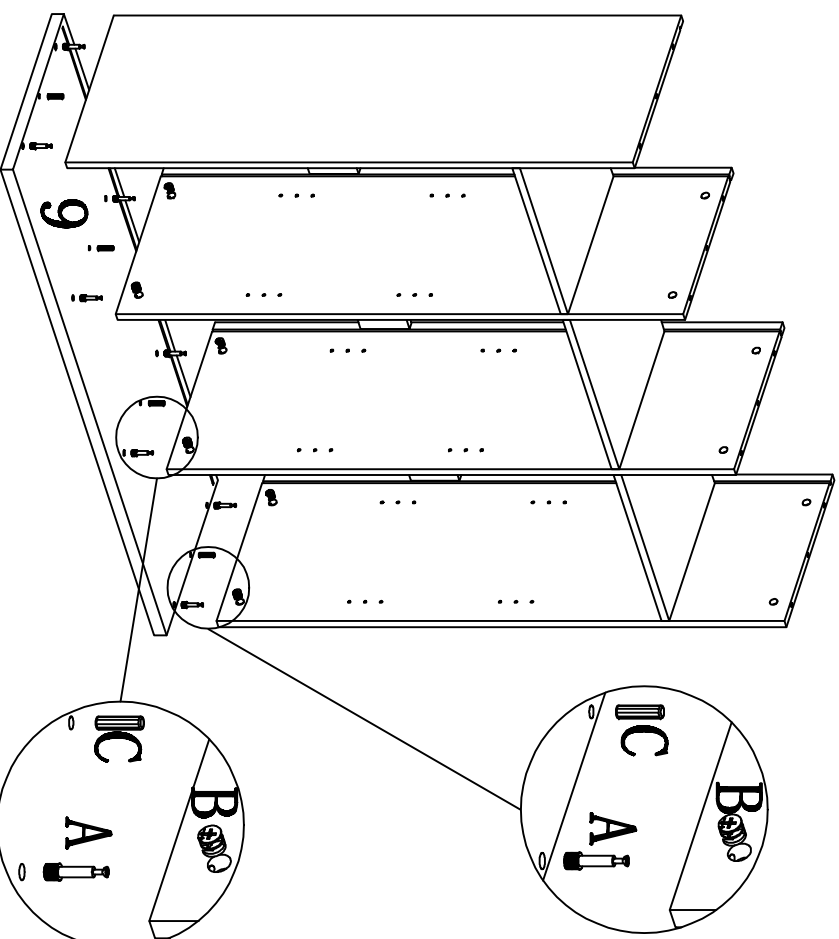


STEP:4

To put the back panel 10 and panel 11 inside
,then to fix the top panel 12

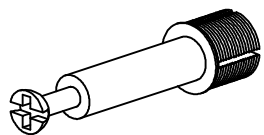


X8

A

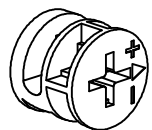



X8


B








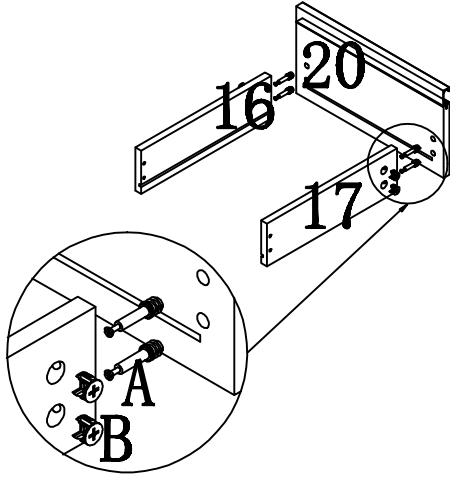
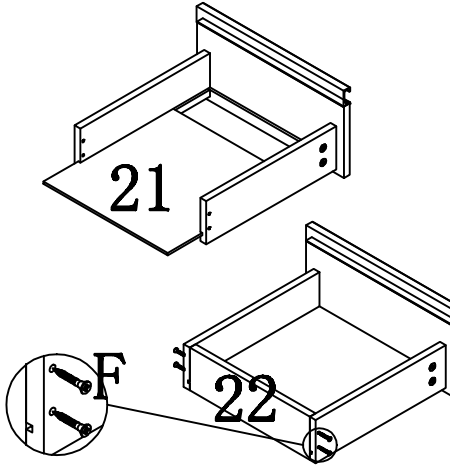
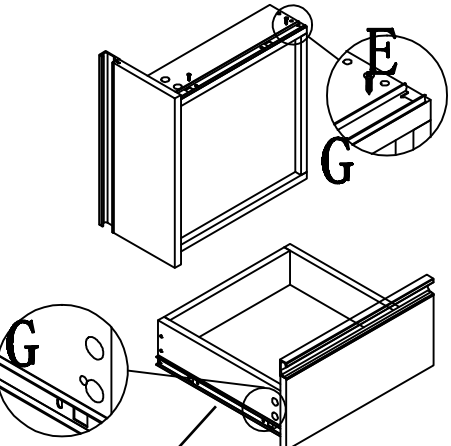
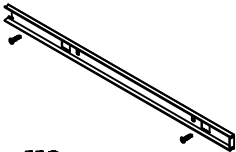


X4

C

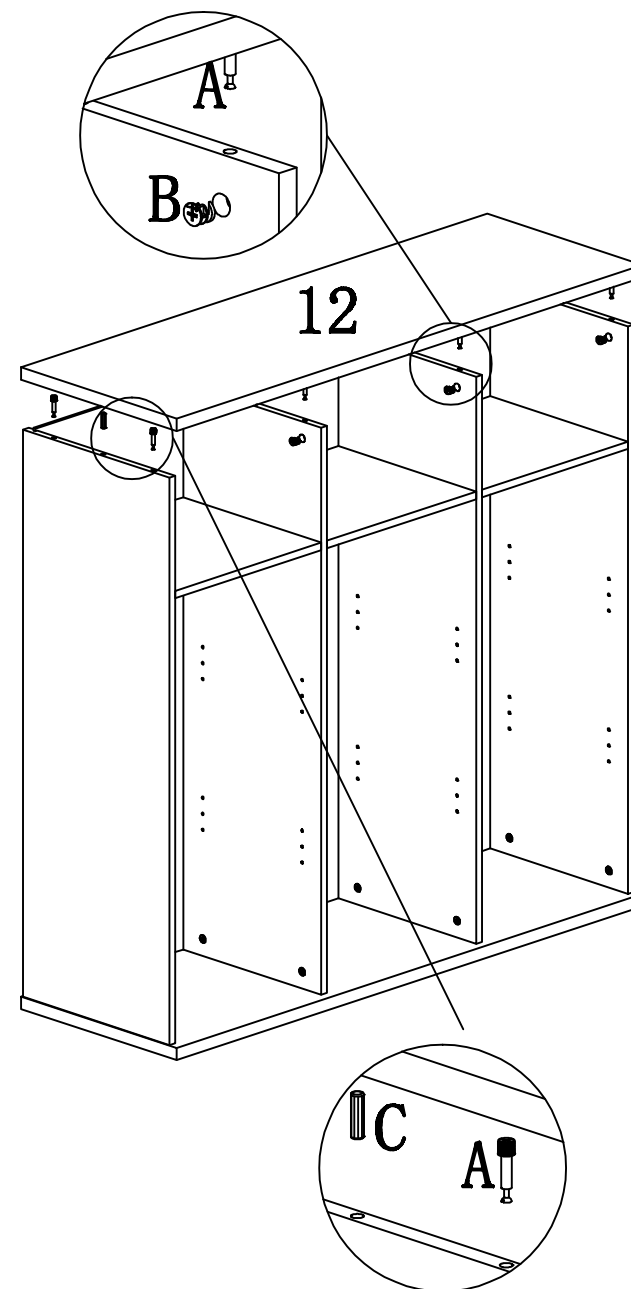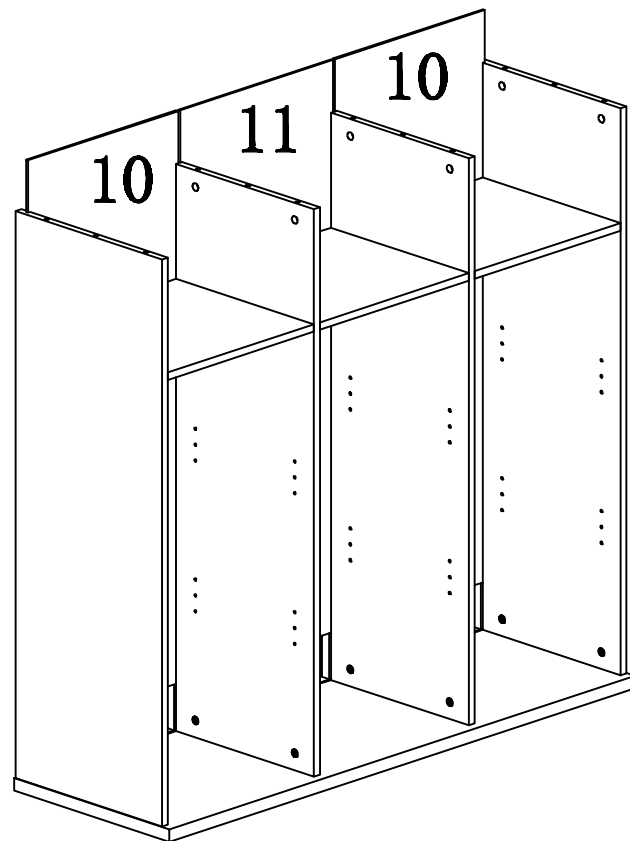

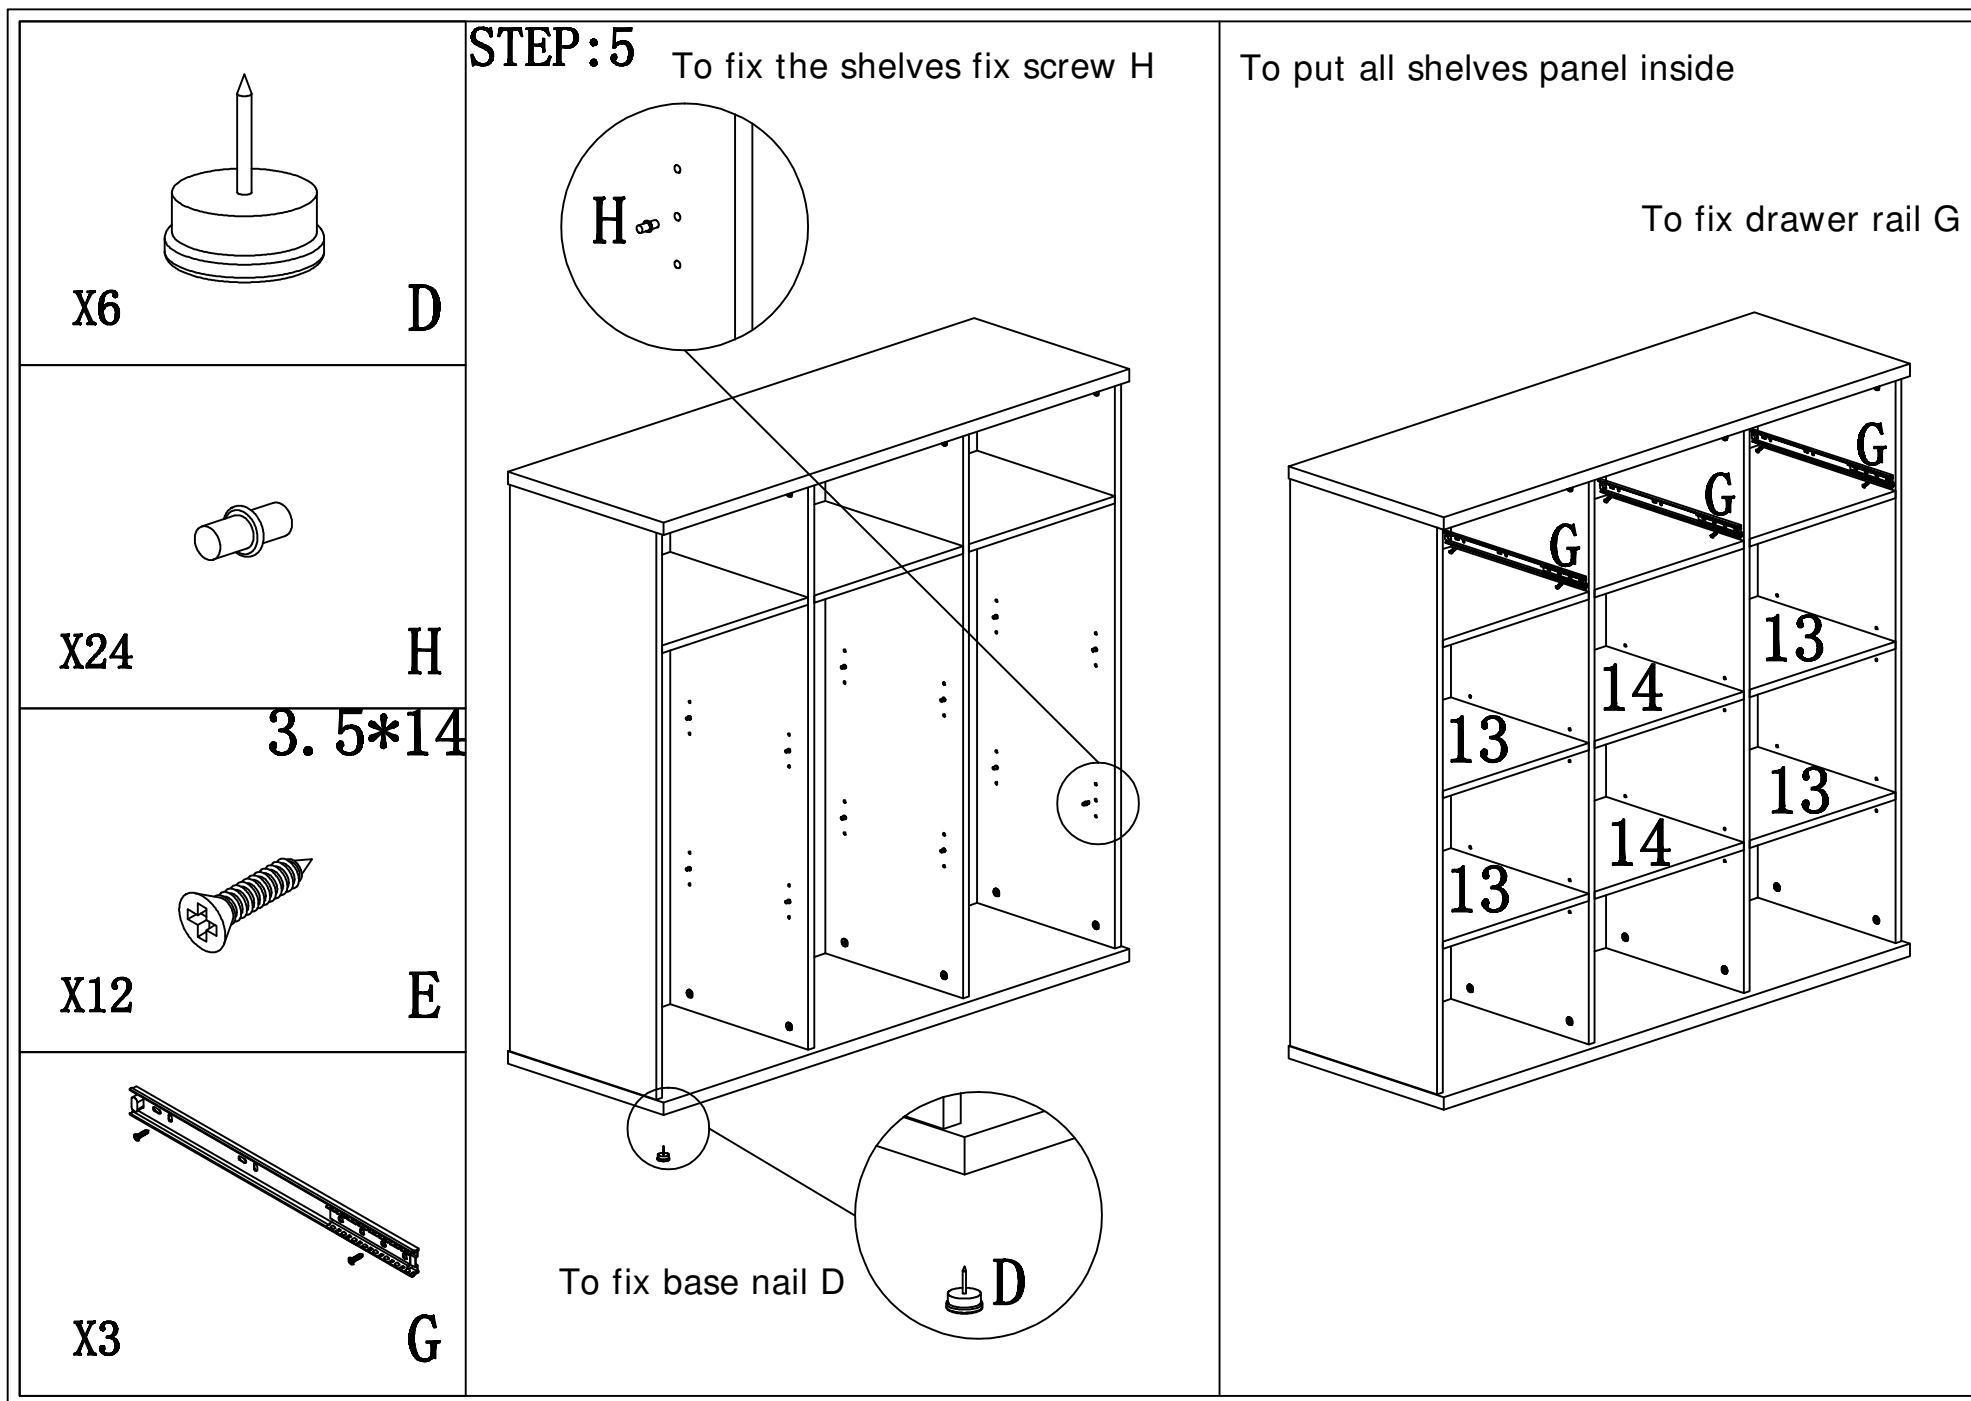


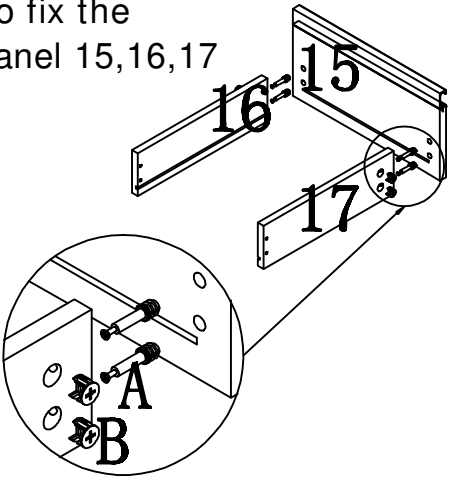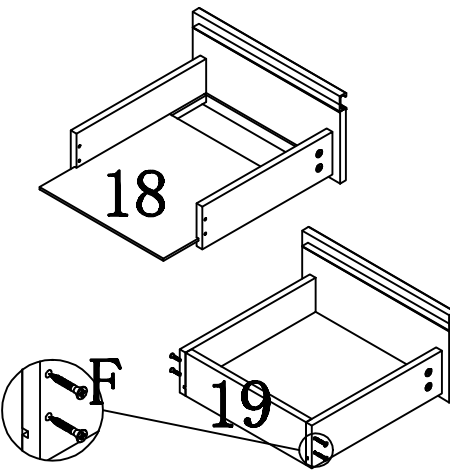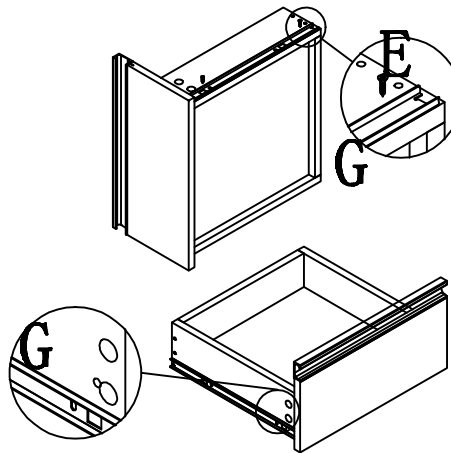 <p>X12 A</p>	<p>STEP:6</p> <p>To fix the panel 15,16,17</p> 	<p>To put the bottom panel 18 inside and fix the panel 19</p> 	<p>To fix both side rail G</p> 
 <p>X12 B</p>			
<p>3.5*14</p>			<p>To use screw E to fix bottom panel four side more tough</p>
 <p>X12 E</p>	<p>To fix the panel 16 ,17,20</p>	<p>To put bottom panel 21 inside and fix panel 22</p>	
<p>4*30</p>  <p>X12 F</p>			
 <p>X3 G</p>			<p>To fix the both side rail G</p>

3.5*14STEP:7


To fix the hinges on doors

To put three drawers inside




X36

E

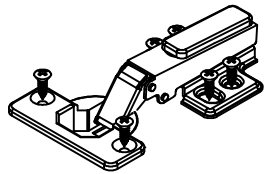





X4

I

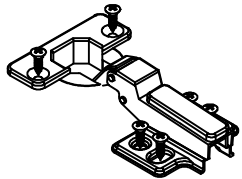


X2

K

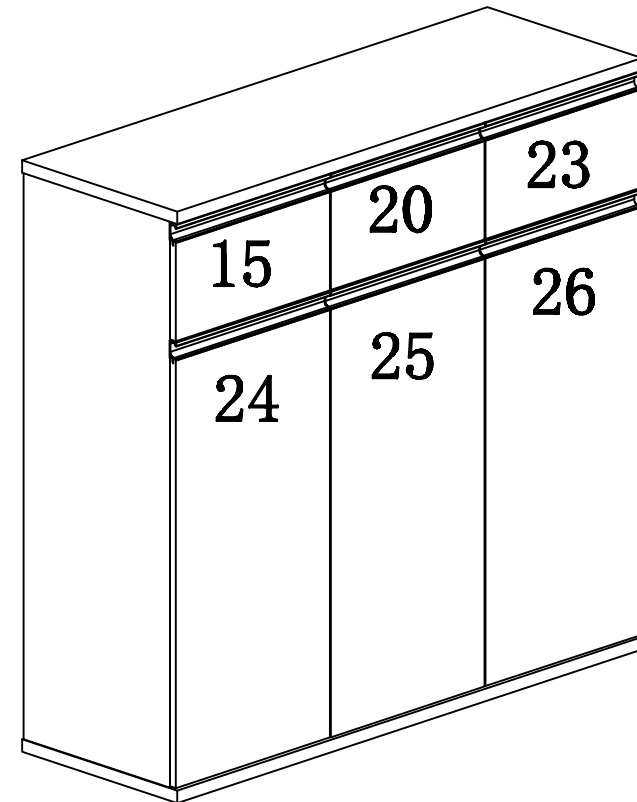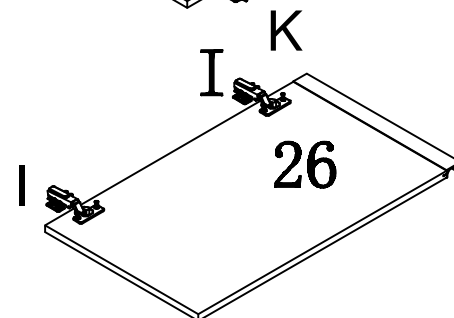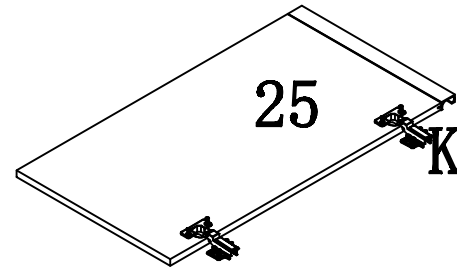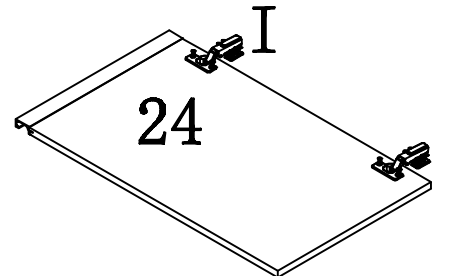


3. 5*14STEP:8

To fix the back panel rubber J




X12

E

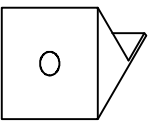

X12

J

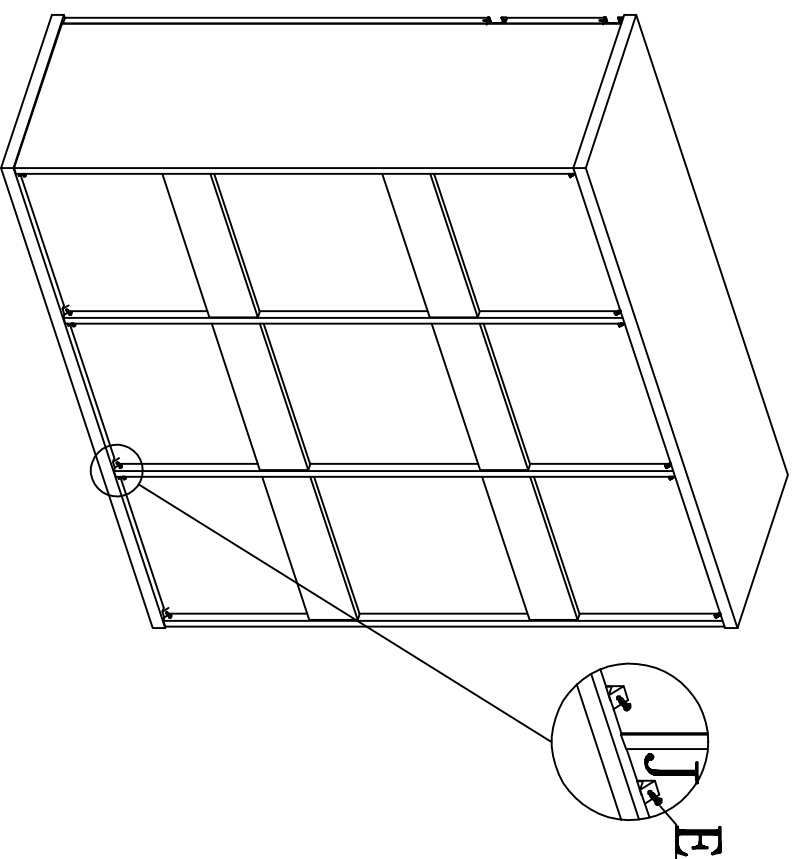

FINISH