
ASSEMBLY INSTRUCTION MODEL CODE: 248-000003

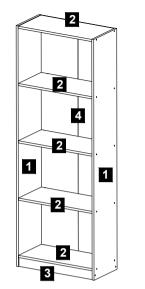

HARDWARE ITEM			QTY
A2		Screw m3.5 x 14mm	8
A17		Crosshead Screw m6.3 x 40mm	24
L1	\bigcirc	Leg Pin	4
N1		Allen Key	1
N3		Nail	50 (+-3)
R1		L Bracket	2


CAUTION

MATERIAL USE LAMINATED PARTICLE BOARD, TO CLEAN USE SOFT, DRY CLOTH. DO NOT USE DETERGENT OR CHEMICAL AVOID CONTACT WITH WATER AND DIRECT SUNLIGHT. TO BE ASSEMBLED ON A SOFT, DRY, CLEAN SMOOTH SURFACE.

USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.




STEP 1First, join panel no. 1, 2 & 3 together by using
Crosshead Screw m6.3 x 40mm (A17). Use Allen
Key (N1) to tighten the Crosshead Screw m6.3 x
40mm (A17).STEP 2

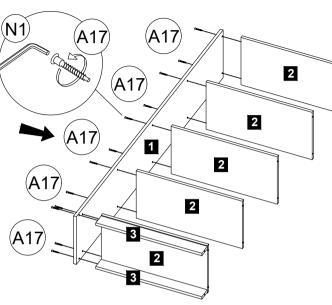

STEP 3 Attach the back panel no. **4** to the unit and secure it by Nail **(N3)**. Assemble L Bracket **(R1)** by using screw m3.5 x 14mm **(A2)**. Attach the Leg Pin **(L1)** at the bottom of both panel no.**1**.

(N3) (N3) (N3) (N3) (N3) (N3) (N3) (L1) 4 1 4 (N3) 1 (N3) A2 (L1) 8 8 (Rľ) 2 R1 (L1 3 (A2) 📽 🧬 2 pcs (L1

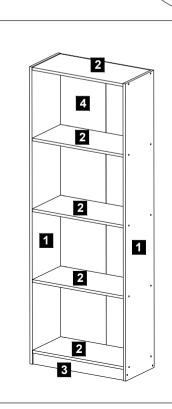

Join panel no. 1 to the unit by using Crosshead

Screw m6.3 x 40mm (A17). Use Allen Key (N1) to

tighten the Crosshead Screw m6.3 x 40mm (A17).

(A17

(A17

(N1)

(A17

harit

(A17

2

1

A17

(A17

2

2

1

3

3

COMPLETE

Stand

up

2

2