























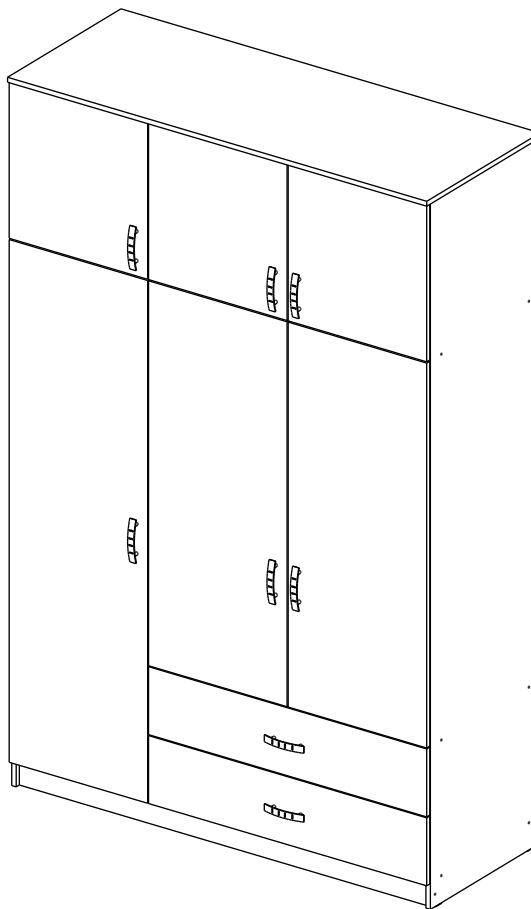





361-000066

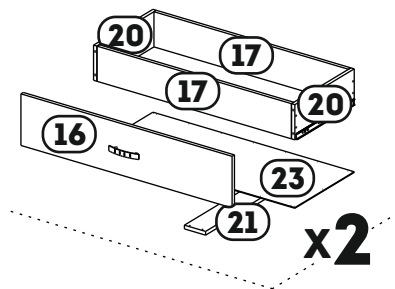

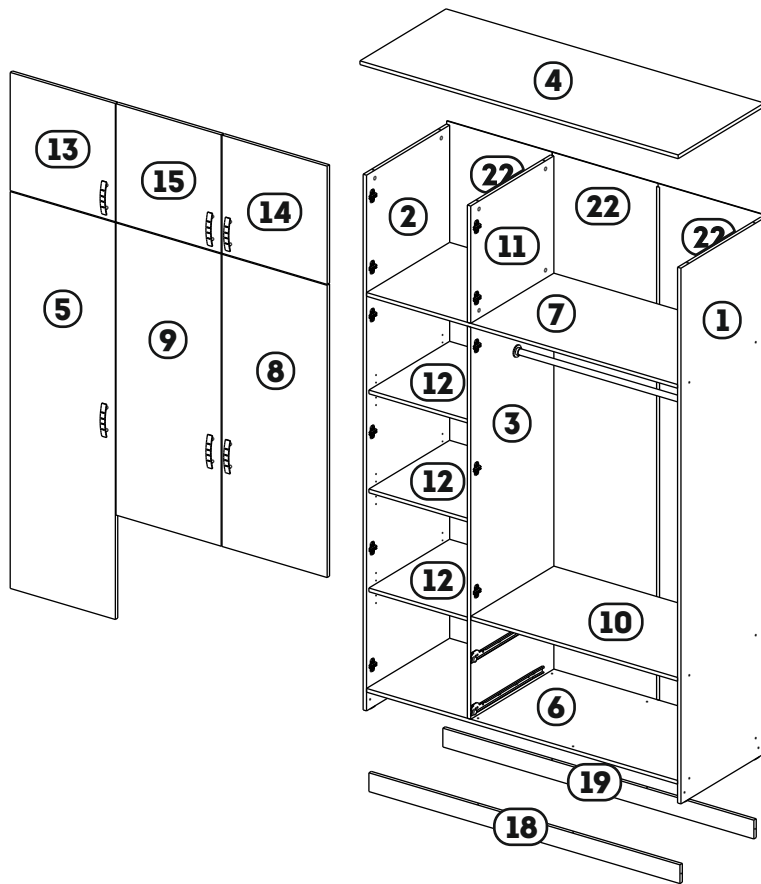

No	a*b	X	Pack
1	2284x560	1	1
2	2284x560	1	1
3	1672x560	1	4
4	1501x580	1	3
5	1692x496	1	2
6	1467x560	1	3
7	1467x560	1	4
8	1246x496	1	2
9	1246x496	1	2
10	976x560	1	4
11	500x560	1	4
12	476x544	3	5
13	504x496	1	5
14	504x496	1	5
15	504x496	1	5
16	220x996	2	3
17	918x150	4	3
18	1467x80	1	3
19	80x1467	1	3
20	400x150	4	2
21	100x400	2	2
22	2216x498	3	1
23	950x400	2	1

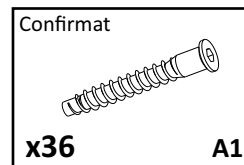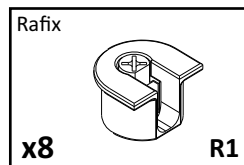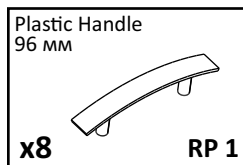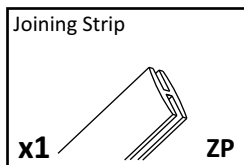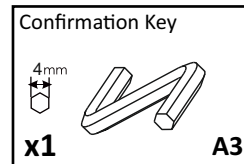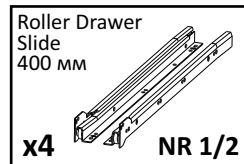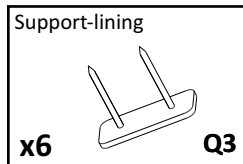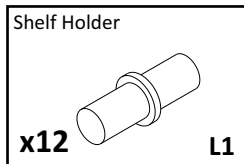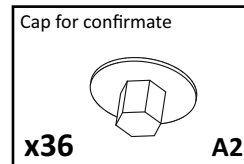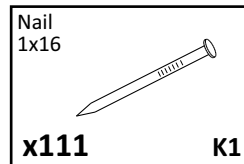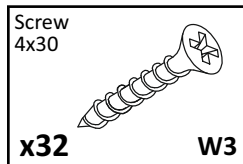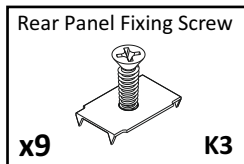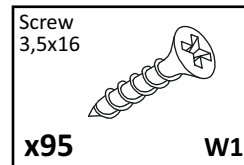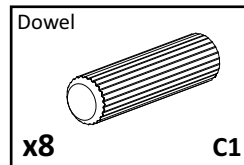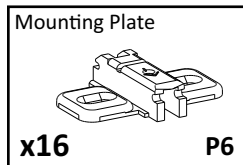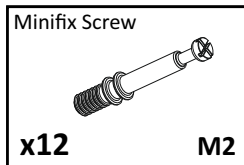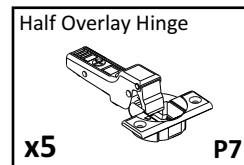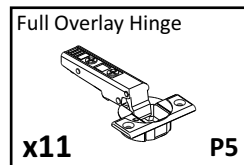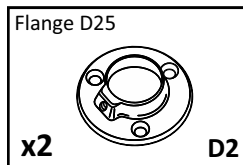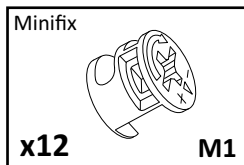

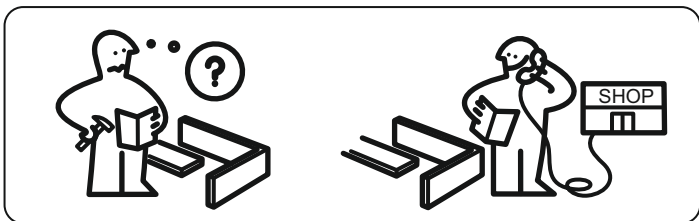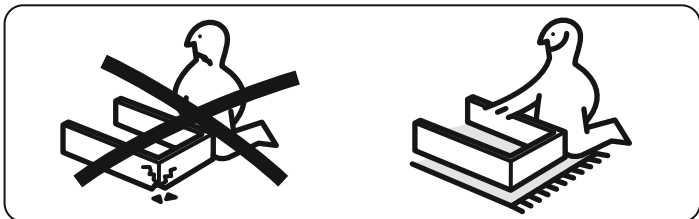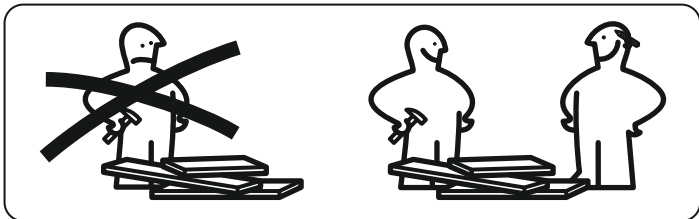

GENERAL TECHNICAL INSTRUCTIONS FOR FURNITURE ASSEMBLY


- CHECK COMPATIBILITY OF PARTS AND ACCESSORIES BEFORE ASSEMBLY.
- FOR FURNITURE ASSEMBLY, WE RECOMMEND USING THE SERVICES OF QUALIFIED SPECIALISTS.
- DO ASSEMBLY ON A SURFACE COVERED WITH CLOTH OR CARDBOARD TO PREVENT SCRATCHES.

CARE AND MAINTENANCE OF FURNITURE

- KEEP THE FURNITURE FROM PROLONGED CONTACT WITH WATER OR HOT STEAM.
- ENSURE SUFFICIENT DISTANCE FROM ELECTRICAL APPLIANCES AND HEATERS.
- IF THERE IS DIRTY ON THE FURNITURE, REMOVE IT WITH A DAMP CLOTH AND THEN WIPE IT DRY. DO NOT USE ABRASIVE MATERIALS.

1


Mounting Plate



x16

P6

Roller Drawer Slide
400 mm



x4

NR 1


Minifix



x12





M1

Screw
3,5x16




x12

W1

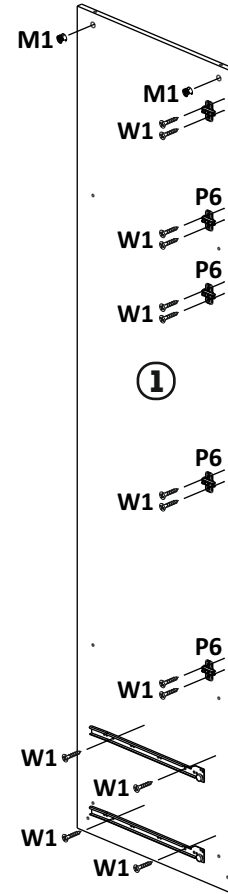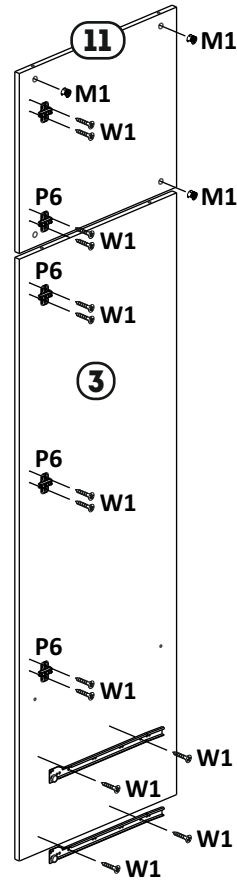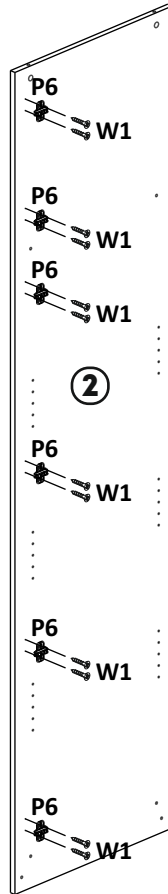

2


Confirmat



x4




A1

Minifix Screw




x2

M2

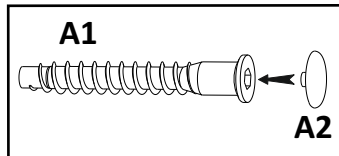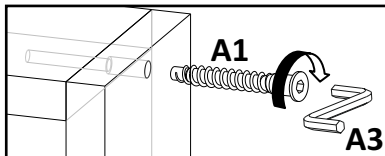
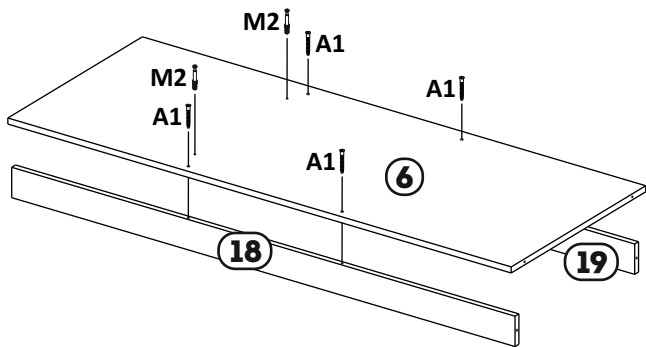
**3**

Confirmat




x8

A1

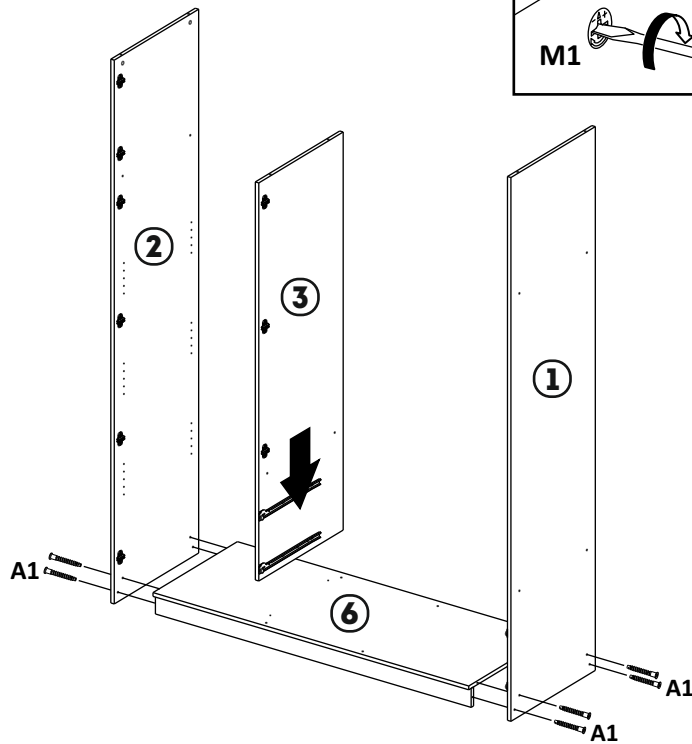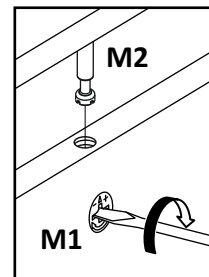



4

Minifix Screw




x4

M2

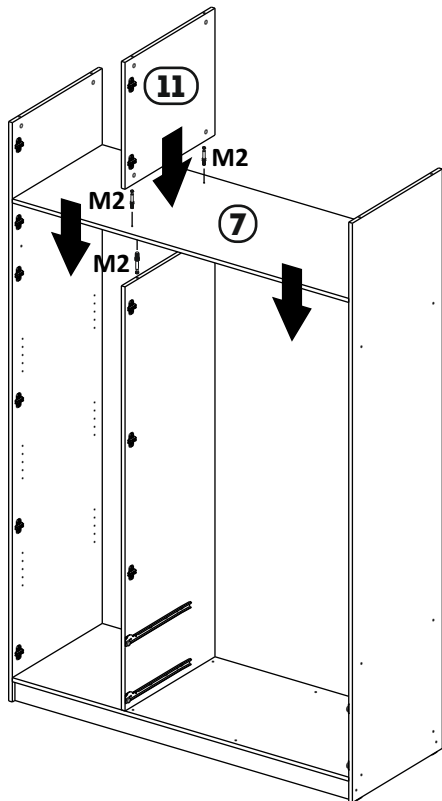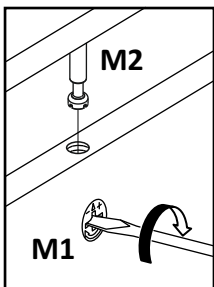

5


Minifix Screw



x6


M2

Confirmat




x8

A1

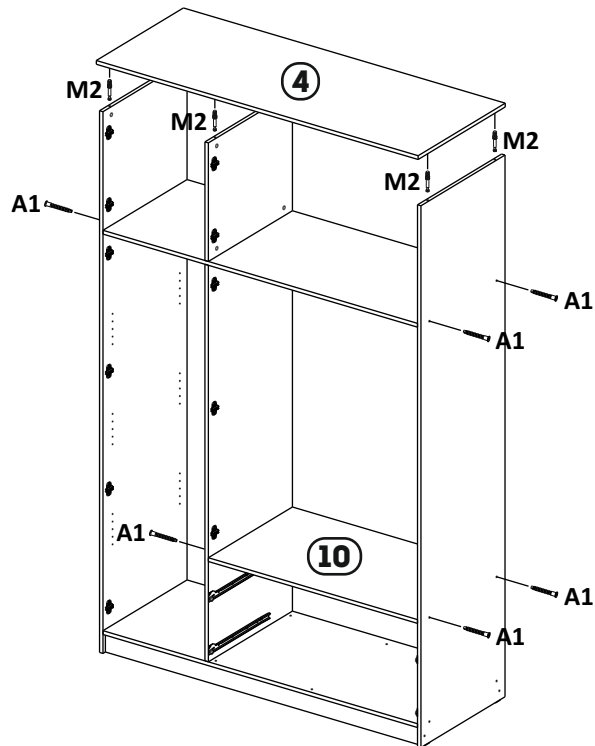



6

Rear Panel Fixing Screw




x9


K3

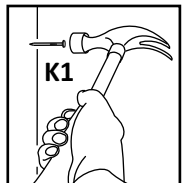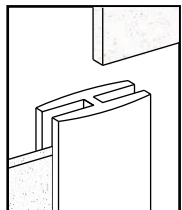

K1

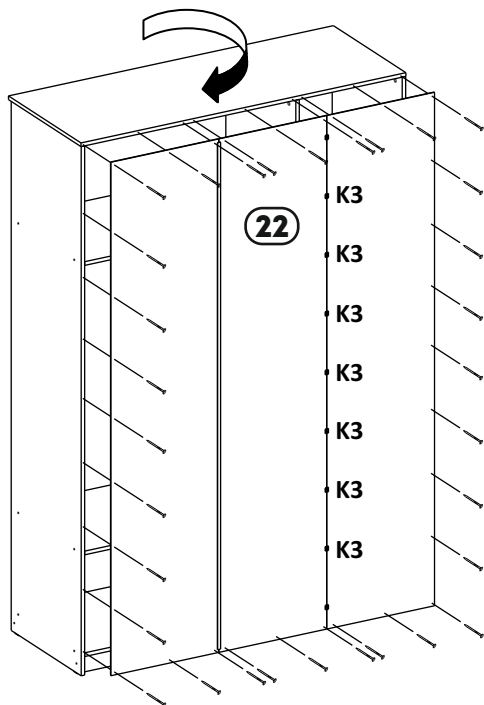**7**

Confirmat



x8



A1

Cap for confirmate




x8

A2

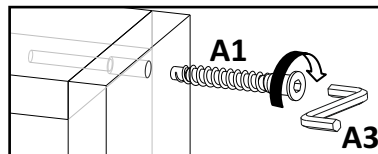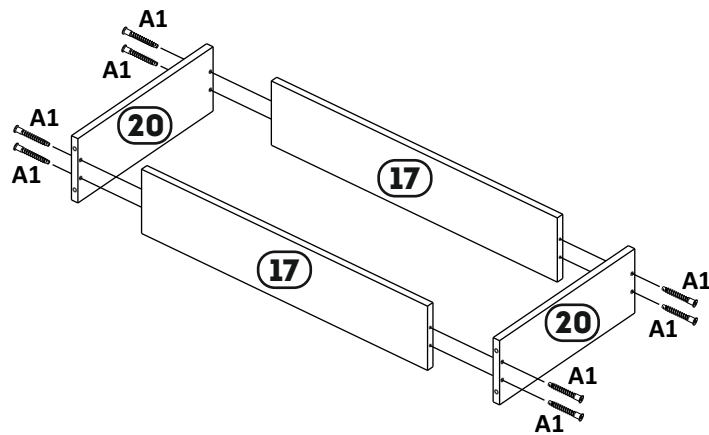



A1

A3




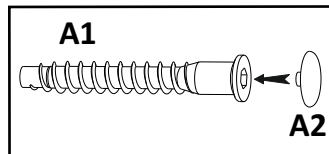


A1

A2

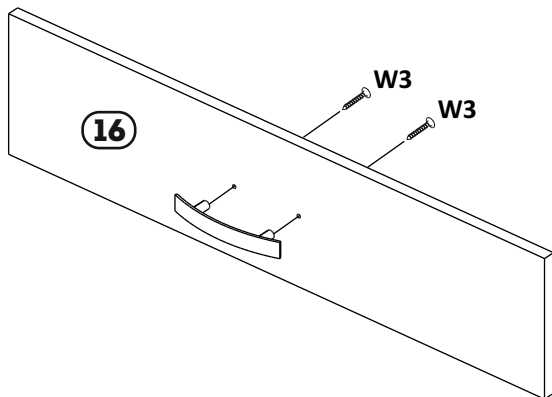
8Screw
4x30**x4****W3**Plastic Handle
96 mm**x2****RP 1****9**

Dowel

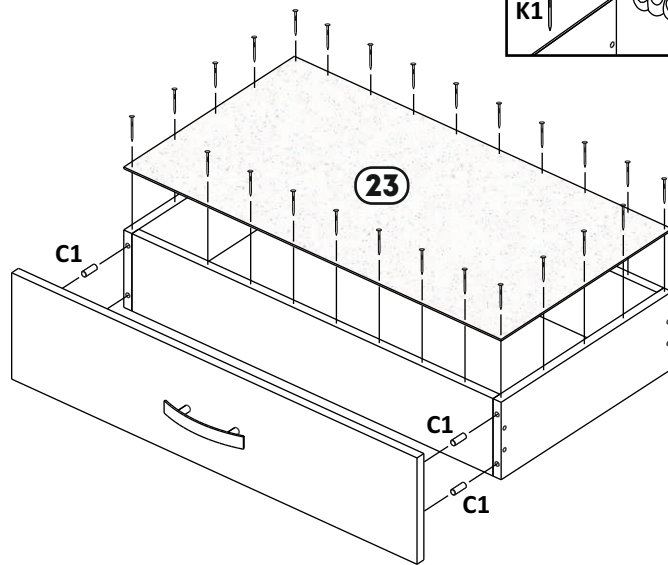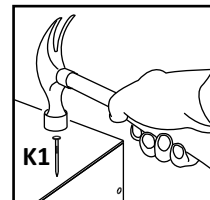**x4****C1**Nail
1x16**x26****K1**

10


Roller Drawer
Slide
400 mm

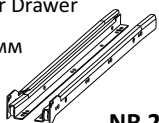

x1



NR 2

Screw
3,5x16




x4

W1

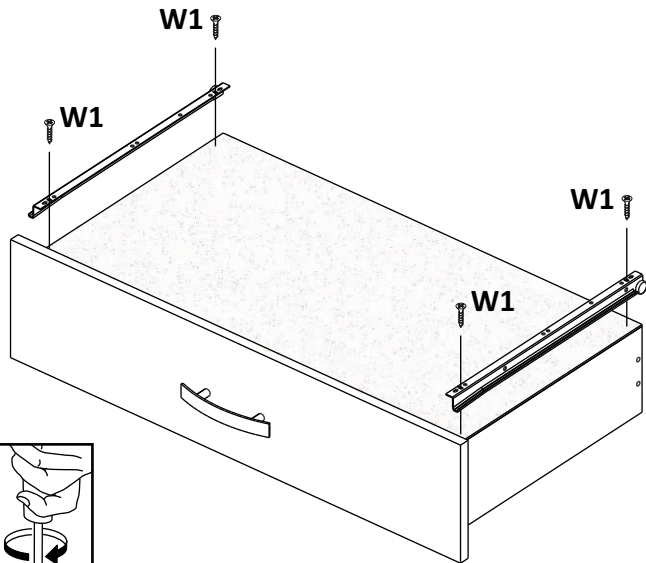


11

Screw
4x30




x4

W3

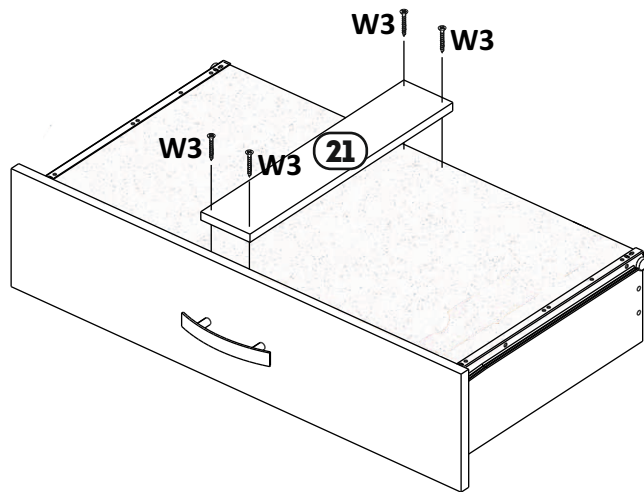


12

Screw
3,5x30




x4

W3

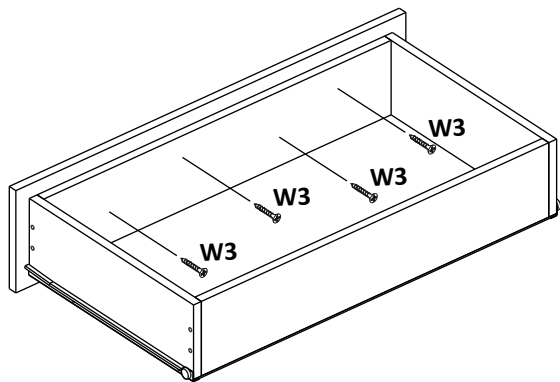

13


Full Overlay Hinge



x11

P5


Half Overlay Hinge



x5


P7

Screw
3,5x16



x12

W1

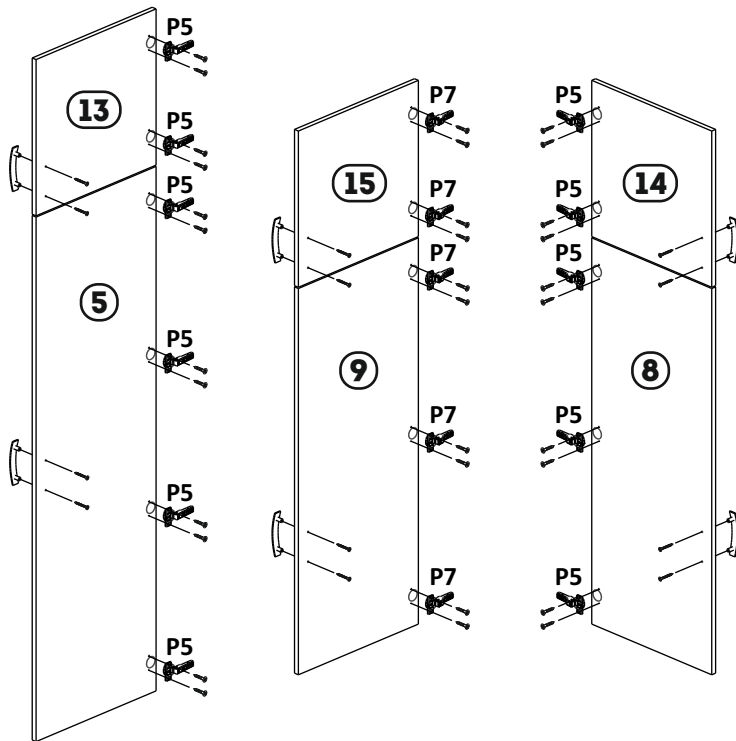

14

