






















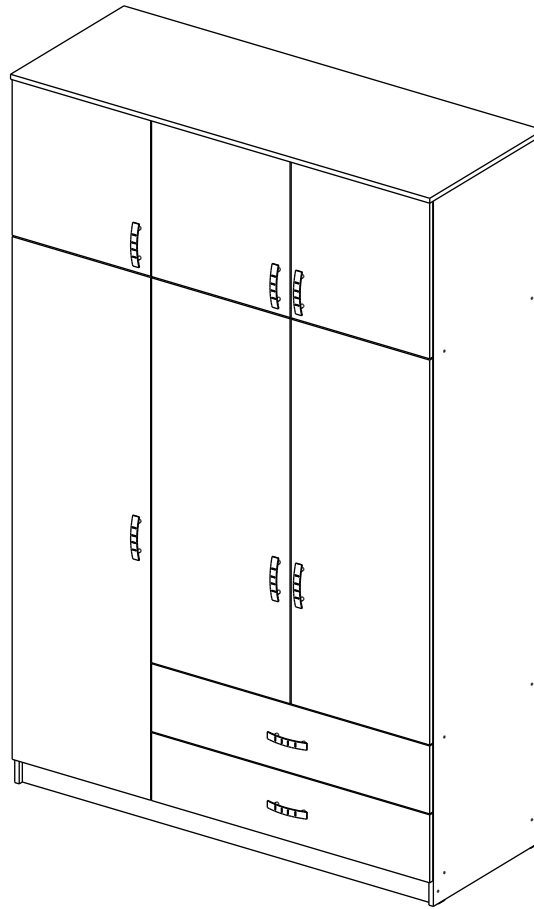





361-000068



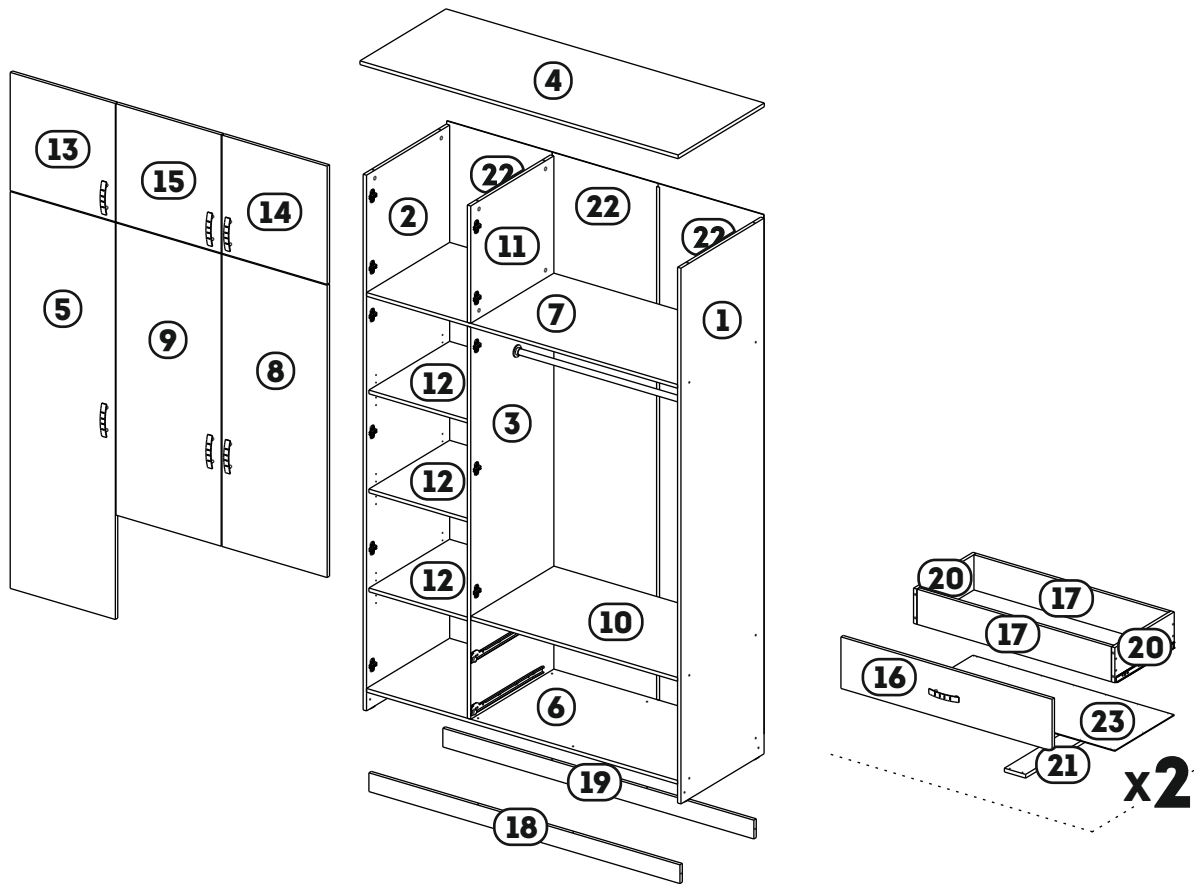

No	a*b	X	Pack
1	2284x560	1	1
2	2284x560	1	1
3	1672x560	1	4
4	1501x580	1	3
5	1692x496	1	2
6	1467x560	1	3
7	1467x560	1	4
8	1246x496	1	2
9	1246x496	1	2
10	976x560	1	4
11	500x560	1	4
12	476x544	3	5
13	504x496	1	5
14	504x496	1	5
15	504x496	1	5
16	220x996	2	3
17	918x150	4	3
18	1467x80	1	3
19	80x1467	1	3
20	400x150	4	2
21	100x400	2	2
22	2216x498	3	1
23	950x400	2	1

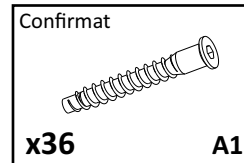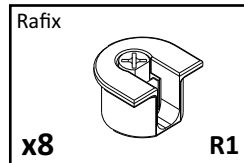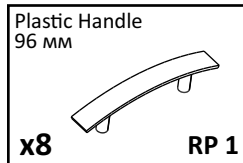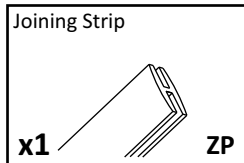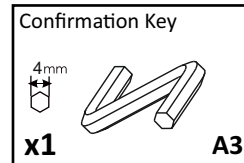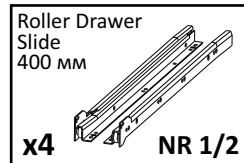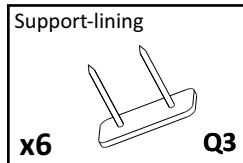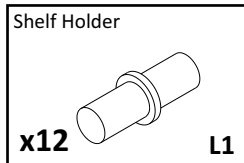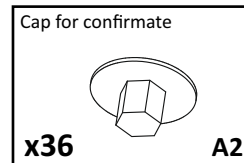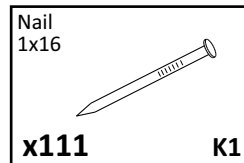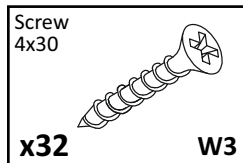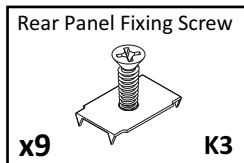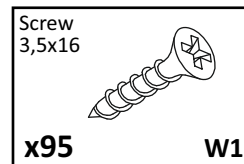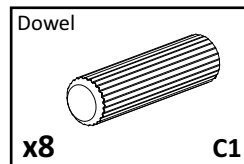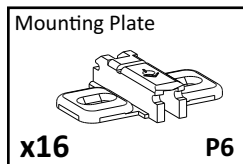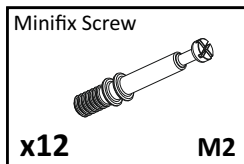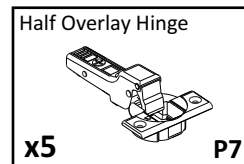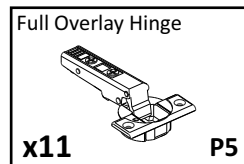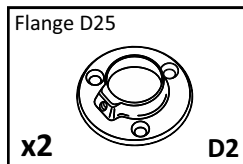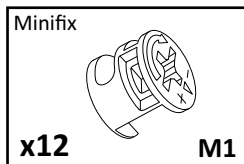

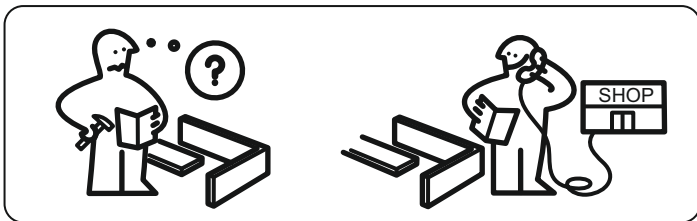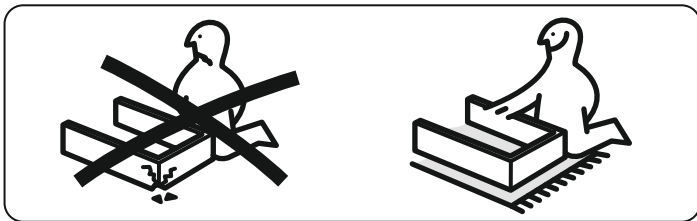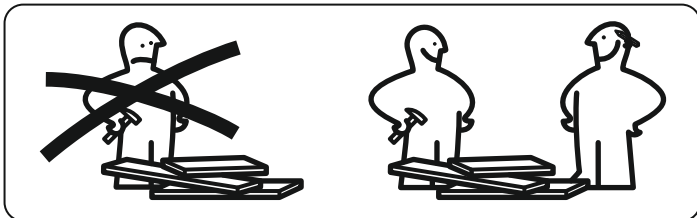

## GENERAL TECHNICAL INSTRUCTIONS FOR FURNITURE ASSEMBLY


- CHECK COMPATIBILITY OF PARTS AND ACCESSORIES BEFORE ASSEMBLY.
- FOR FURNITURE ASSEMBLY, WE RECOMMEND USING THE SERVICES OF QUALIFIED SPECIALISTS.
- DO ASSEMBLY ON A SURFACE COVERED WITH CLOTH OR CARDBOARD TO PREVENT SCRATCHES.

## CARE AND MAINTENANCE OF FURNITURE

- KEEP THE FURNITURE FROM PROLONGED CONTACT WITH WATER OR HOT STEAM.
- ENSURE SUFFICIENT DISTANCE FROM ELECTRICAL APPLIANCES AND HEATERS.
- IF THERE IS DIRTY ON THE FURNITURE, REMOVE IT WITH A DAMP CLOTH AND THEN WIPE IT DRY. DO NOT USE ABRASIVE MATERIALS.

# 1


Mounting Plate



x16

P6

Roller Drawer Slide  
400 mm



x4

NR 1


Minifix



x12





M1

Screw  
3,5x16




x12

W1

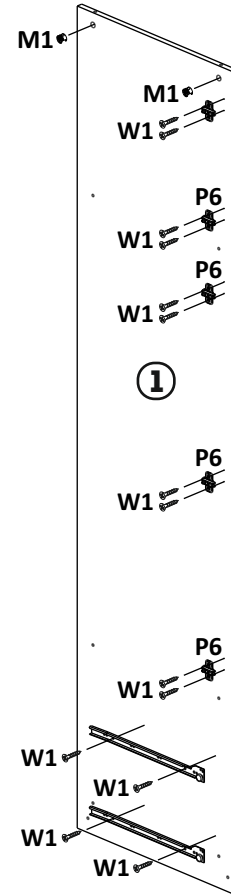
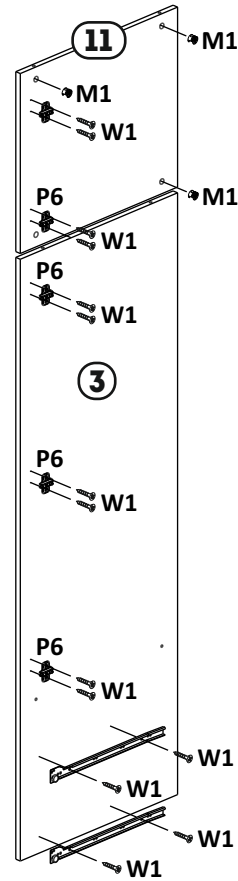
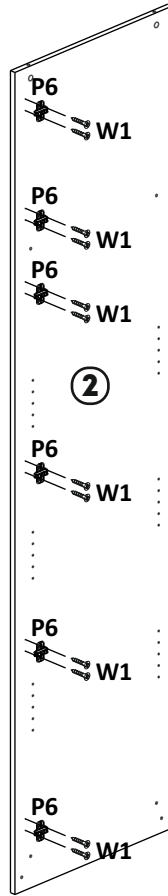



**2**




Confirmat

**x4****A1**

Minifix Screw

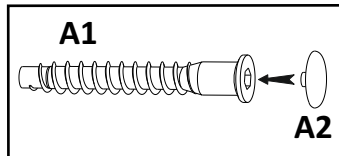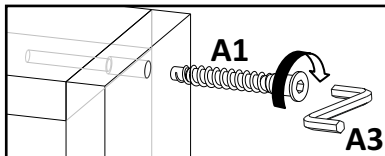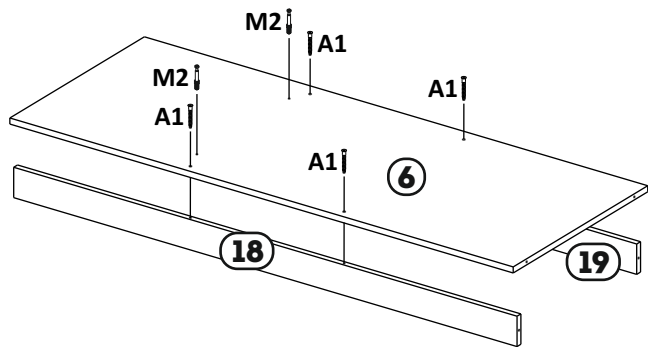
**x2****M2****3**

Confirmat

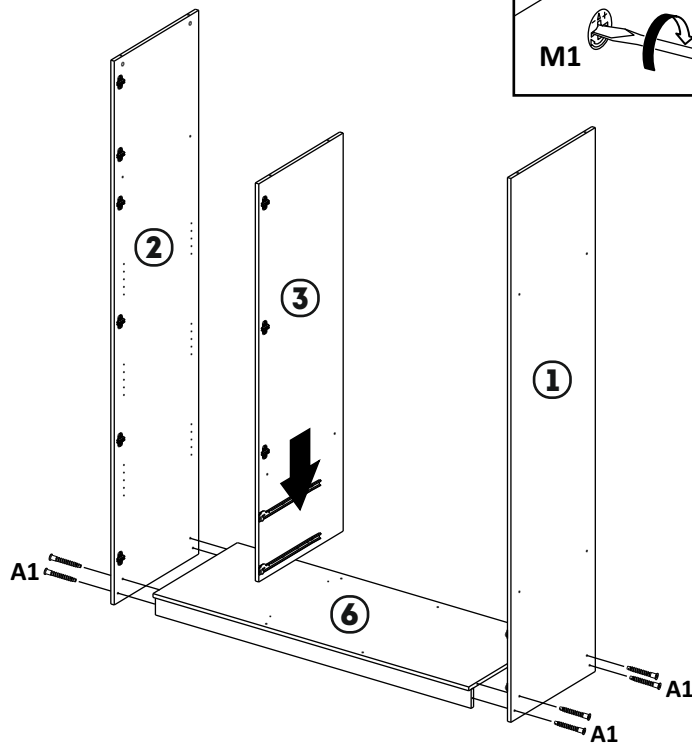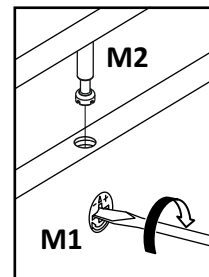**x8****A1**



4

Minifix Screw




x4

M2

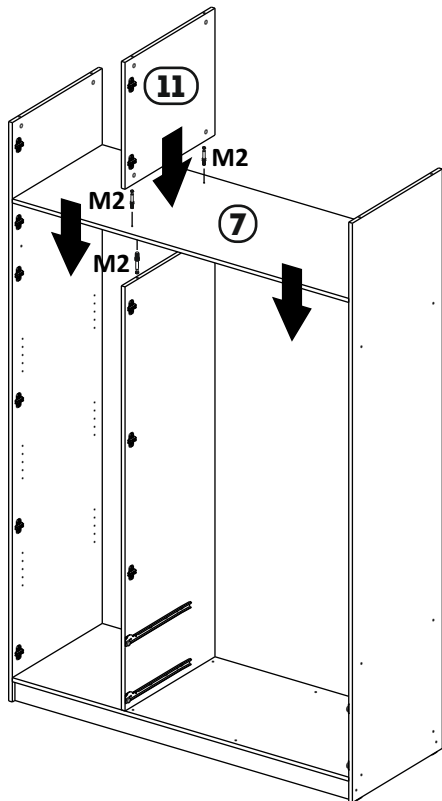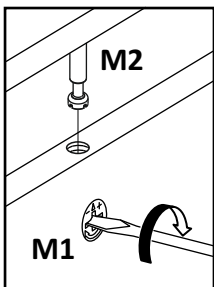

5


Minifix Screw



x6


M2

Confirmat




x8

A1

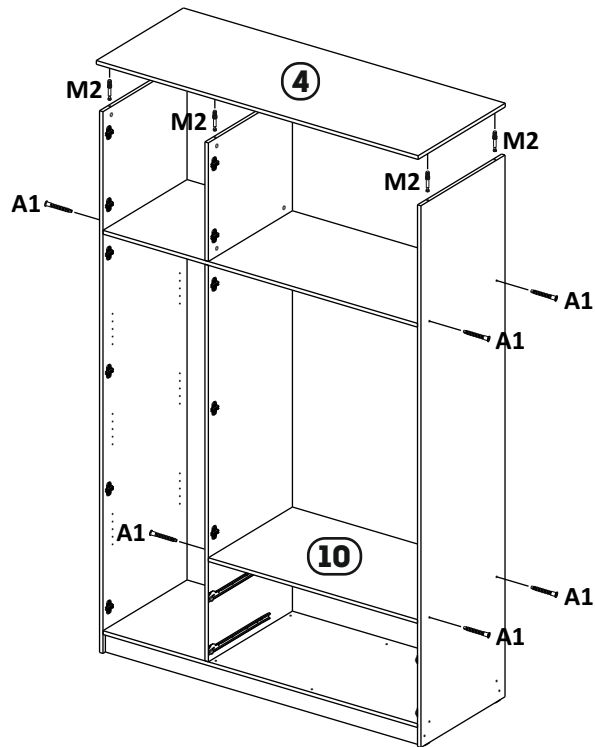



**6**

Rear Panel Fixing Screw




x9


K3

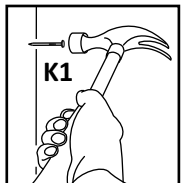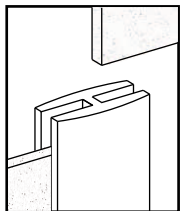

K1

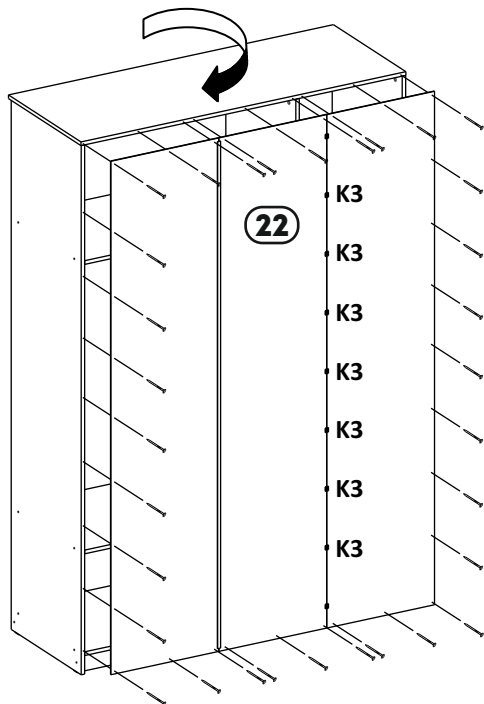**7**


Confirmat



x8




A1

Cap for confirmate





x8





A2

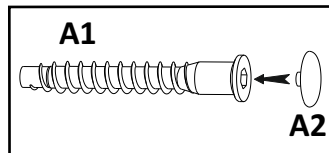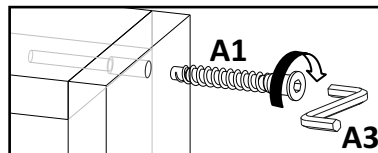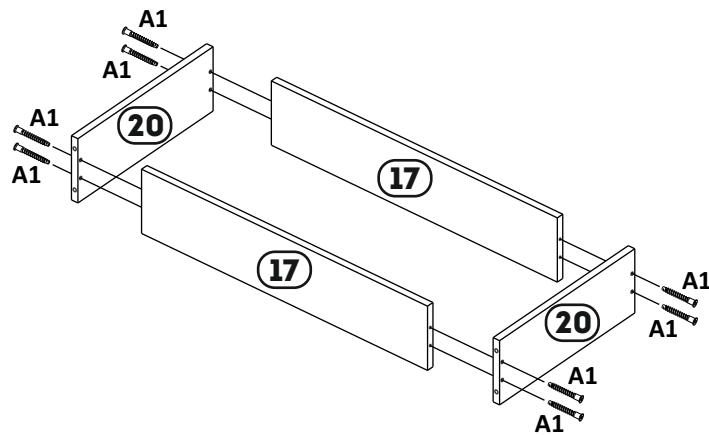

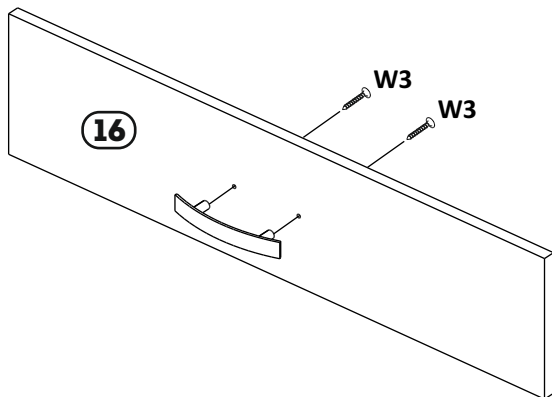


**8**Screw  
4x30**x4****W3**Plastic Handle  
96 mm**x2****RP 1****9**

Dowel

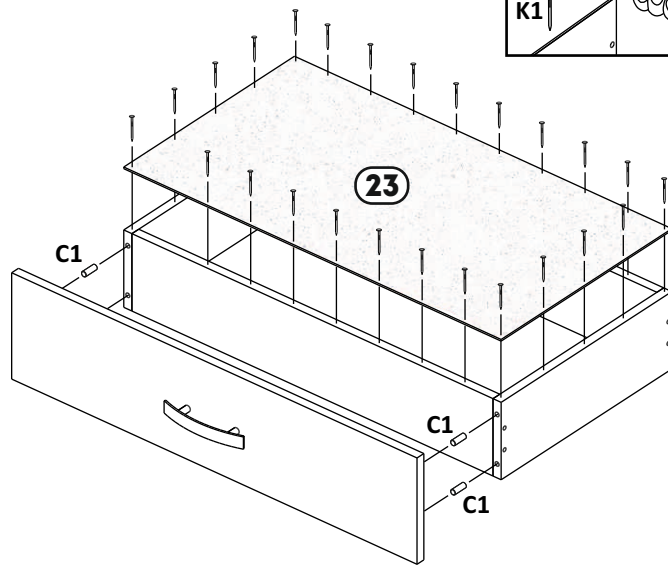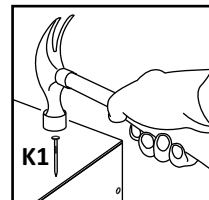**x4****C1**Nail  
1x16**x26****K1**

# 10


Roller Drawer  
Slide  
400 mm

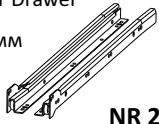

x1



NR 2

Screw  
3,5x16




x4

W1

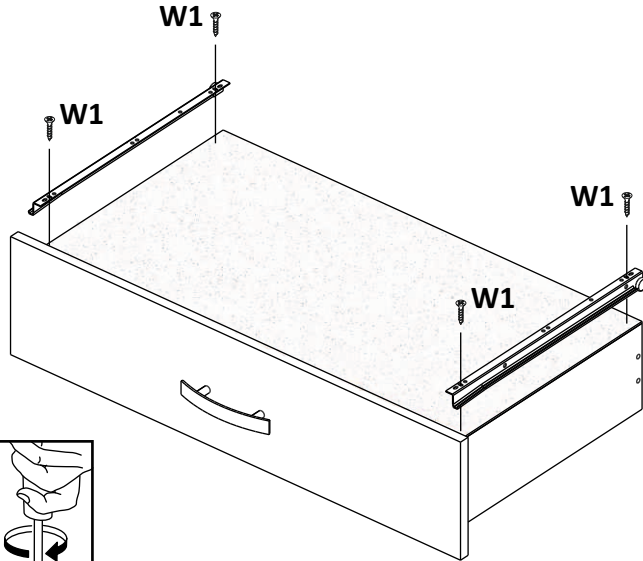


# 11

Screw  
4x30




x4

W3

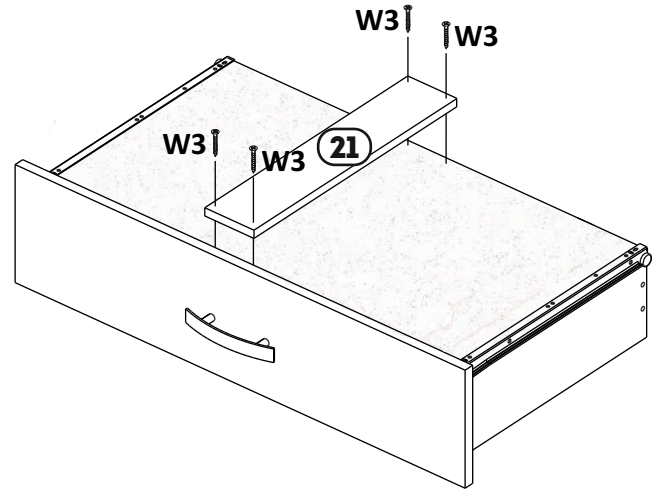


# 12

Screw  
3,5x30




x4

W3

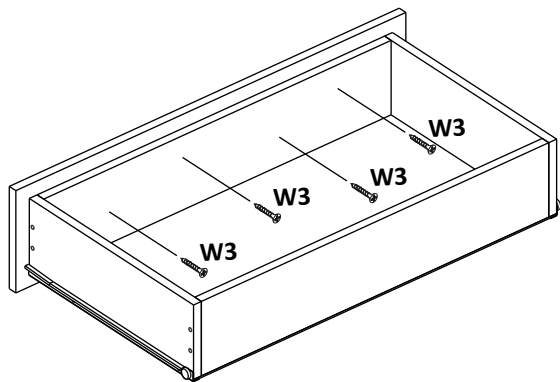

# 13


Full Overlay Hinge



x11

P5


Half Overlay Hinge



x5


P7

Screw  
3,5x16



x12

W1

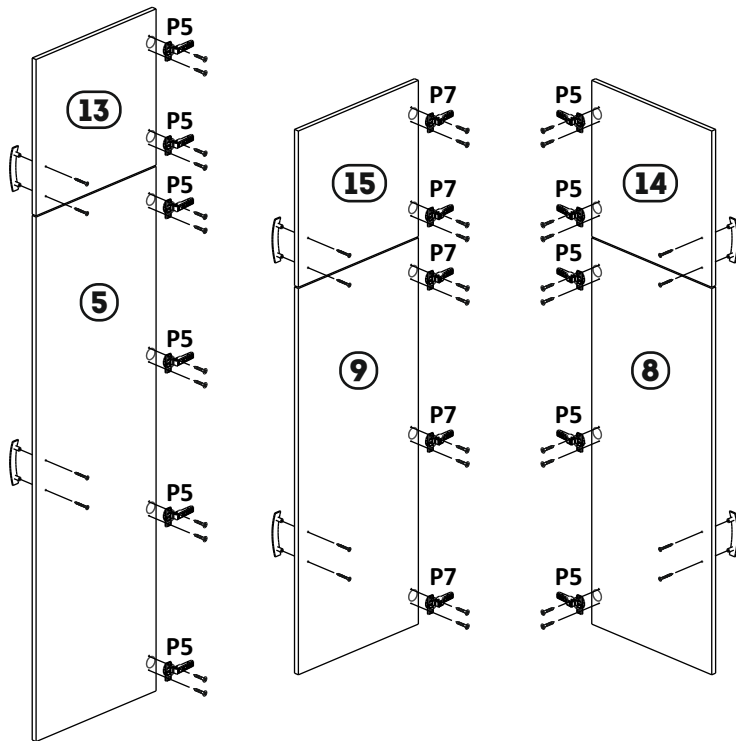

14

